SILENT1

INSTALLATION MANUAL



HIGH LIFT

SPEED YOU CAN TRUST.
SILENCE YOU NOTICE.

MANUAL

ATTENTION! GENERAL WARNINGS!

To install, use and maintain this door safely, a number of precautions must be taken. For the safety of all concerned pay heed to the warnings and instructions given be low! If in doubt, contact your supplier.

SPECIAL SAFETY WARNINGS OR REMARKS IN THIS MANUAL ARE INDICATED WITH THIS SYMBOL:READ THESE WARNINGS CAREFULLY.

- This manual has been written for use by experienced fitters and as such is not suitable for d.i.y. purposes or for use by trainee fitters.
- This manual describes the installation of the hardware set components, door sections (panels) and refers to installation manuals of the electrical operators. Be sure to supplement this manual if needed with instructions for any additional components not described in this manual.
- Before starting, read this manual carefully!
- Certain components may be sharp or have jagged edges. As such you are advised to wear safety gloves.
- All the components which have been supplied are designed for use with this specific overhead door. Replacement or adding additional components may have an adverse effect on the safety of, and the guarantee on, the door. Also the CE-approval which has been granted to this door combination will be cancelled when components are changed or installation is not done according to this manual! Installer is responsible for this.
- During tensioning, springs can exert large forces. Work carefully. Use the proper equipment. Ensure that you are standing in a steady position.
- Ensure that there is sufficient light during installation. Remove obstacles and dirt. Make sure that there is no one else present other than the fitters. Other people (children!) may get in the way or endanger themselves during the installation.
- Ensure that the building is constructed strong enough to carry the overhead door construction. It is the responsibility of the installing company to use fixing materials which are strong enough and equipped to fix the overhead door to the building.
- A power operated overhead door may not be equipped with a pull cord (rope). Be sure that this has been removed when a manual operated door is being equipped with an E-operator.
- Environments closed by an electrical operated overhead door with operators which are not disconnectable and where the door cannot be manual operated must be equipped with a pass door.
- Cutting of the bottom section is not allowed. The forces on cable break devices and bottom brackets are too high. Cutting is weakening the construction of the door on this critical point.

This door can only be taken into use, when all instructions are followed and:

- The installer has checked the combination of hardware, panel and e-operator as being approved and safe. Make sure to check the max. peak force and the proper functioning of the safety edge system in combination with the operator.
- All documentation has been handed over to the end-user: IIa Declaration of conformity, User Guide, Maintenance Instructions, Dismantling instructions, Service Log Book and this manual.
- A CE-identification plate has been placed on the door.
- User has been given instructions and demonstration of the proper use and functioning of the door.

MANUAL

GUARANTEE, CONDITIONS AND TERMS

The general terms and conditions of delivery and payment issued by the Metaalunie and designated as METAAL-UNIE CONDITIONS are fully applicable to all our quotations, contracts and their implementation. We expressly reject all other terms and conditions. On request we will send you a copy of these terms and conditions free of charge. A copy may also be downloaded from our website www.iddparts.eu. IDD-Parts strives to deliver 100 % in conformance with the order. In practice, in spite of all our controls, this is not always possible. However we will rectify any errors as quickly as possible, in order to minimise the inconvenience caused to you or the user. As such, it is important that you inform us as soon as possible about any problem with the delivery (include the order number and week of production) and give us the opportunity to offer a suitable solution.

IDD-Parts will only reimburse third party costs if we have given explicit permission for this in advance.
The reimbursement is based on normal rates and travelling expenses over distances of 1 hour away at most.
For large-scale projects we strongly advise you to first install 1 door completely before installing the other doors.
In this way, any errors can be detected early on and rectified comparatively cheaply.

This manual does not confer any rights. Technical modifications may be made without written notice.
IDD-Parts has endeavoured to design and put together this hardware set in conformance with the applicable CE-norms.

However, we recommend to check our configuration against any localnational specification.


IDD-PARTS B.V., Hanzeweg 21, 3771 NG Barneveld, The Netherlands
Tel. +31-(0)342-490990, info@iddparts.nl


APPLICABLE CE DIRECTIVES AND RESTRICTIONS:
Industrial overhead doors brought into the European market must follow the EMC-Directive*, Low Voltage Directive*, Machine Directive* and Construction Products Directive, issued by CEN.
(* = only power-operated doors)
IDD-Parts has developed and constructed this hardware set according to these directives. This gives a restriction to the max.
forces and dimensions of industrial doors:


- Max width : 5 meter
- Max height : 5 meter
- Max door weight : 385 kg
- Standard equipped with anti-drop protection: Cable break device and spring breaking device
- Other safety accessories: roller protection, bottom safety edge system (when power operated), slack cable device, cable inside track system.
- Tested for CE when selecting the proper IDD-Parts components, and combining with tested panels and operator/control unit combinations.
- Use of finger safe sections for door heights <2,75m.
- Cables outside the track system are not allowed, unless the cables are covered.

IDD-Parts has applied the mandated INITIAL TYPE TESTING for doors described in this manual, at the SP-Institute in Sweden (as Notified Body Nr. 0402). The INITIAL TYPE TESTING REPORT that has been rewarded, can be transferred to the door producing company when truly declared conformity is done. This is needed to complete your CE technical construction file according to product standard EN13241-1. The ITTR-number should be placed on the CE-plate on the door.

The article codes of the parts are given in (parentheses). This door can only be installed according to the CE-certificate if all parts are according to the parts lists of the SP-certificate. See www.iddparts.eu.

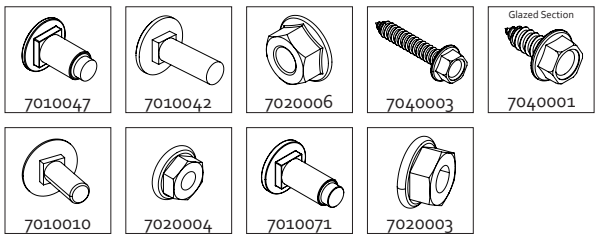


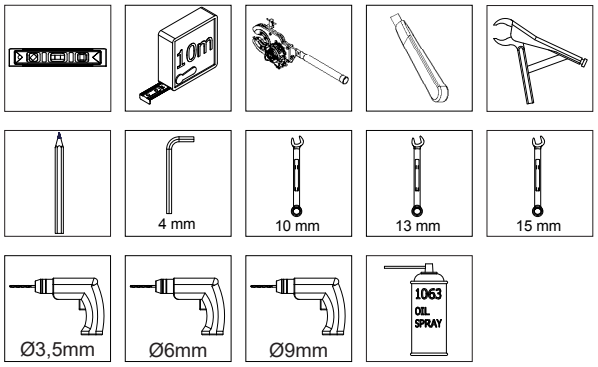

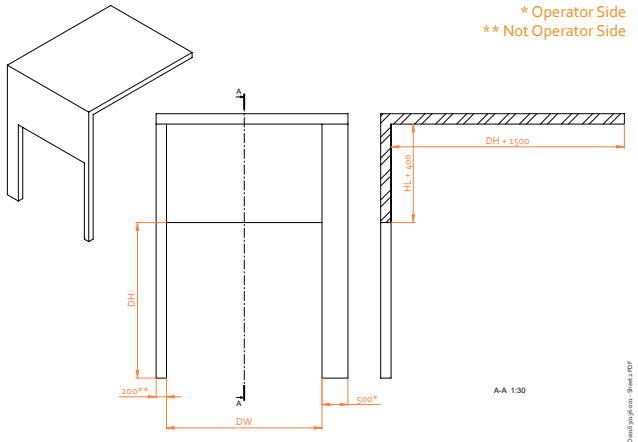



TV1


Track - Vertical - Part 1

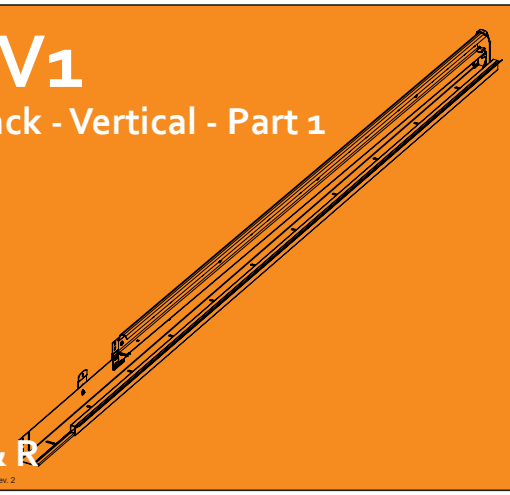



L & R

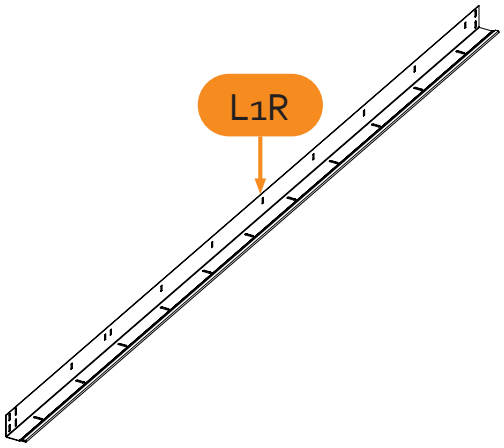


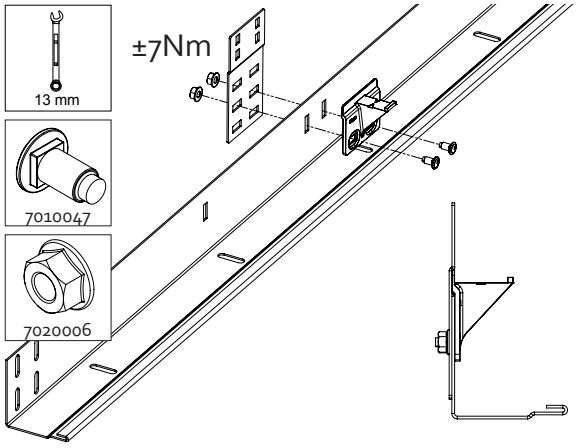


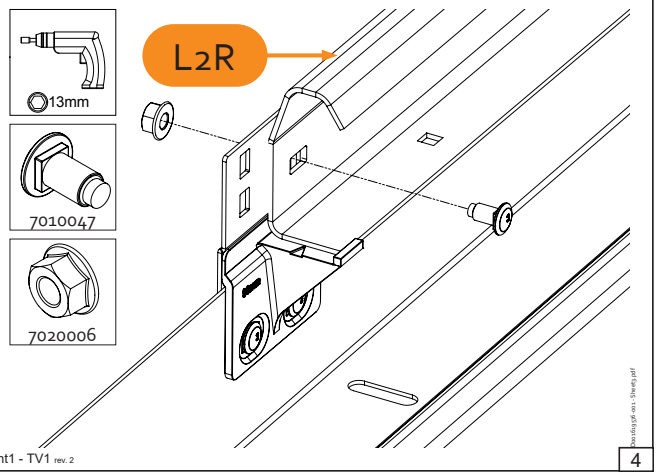

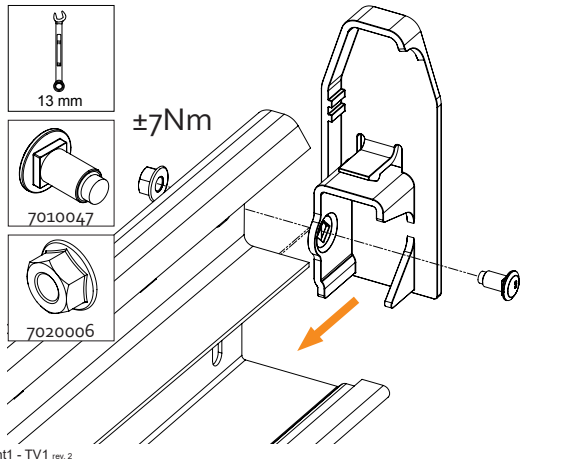

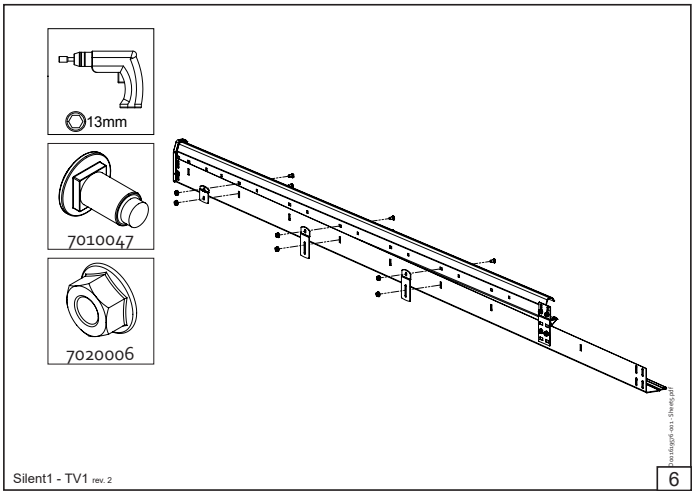


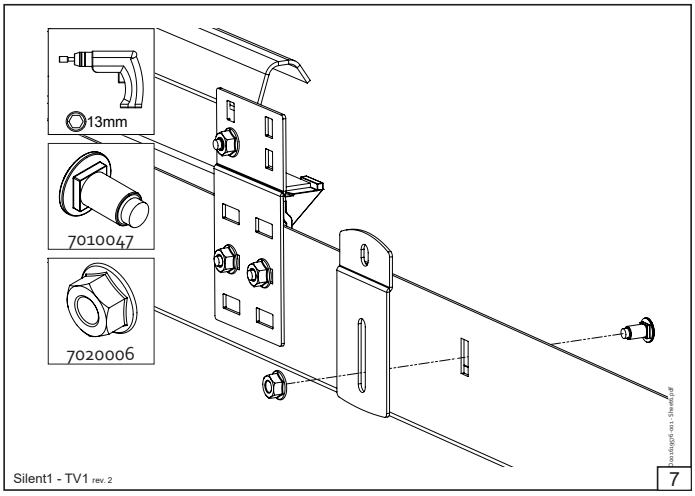


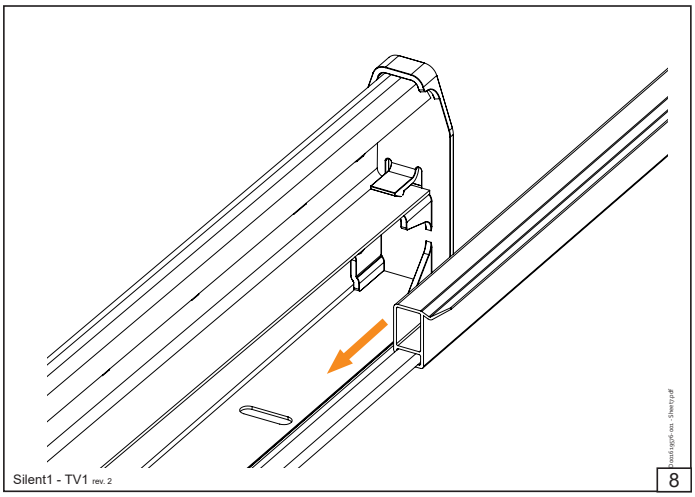



TV2


Track - Vertical - Part 2

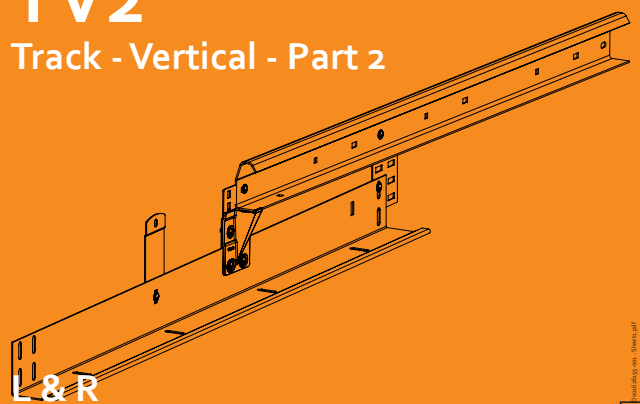


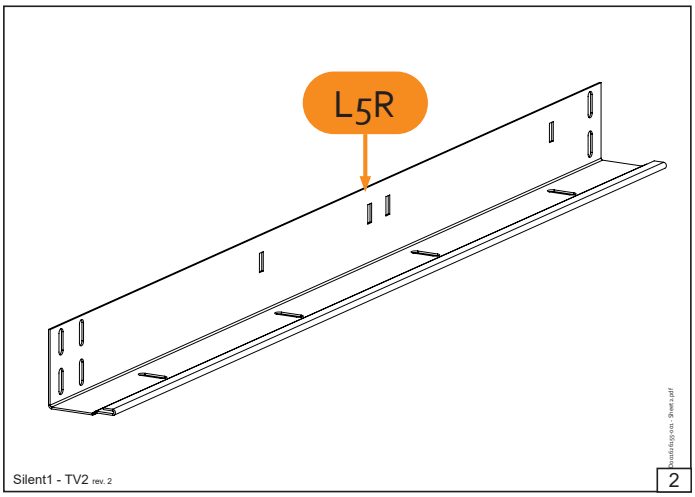


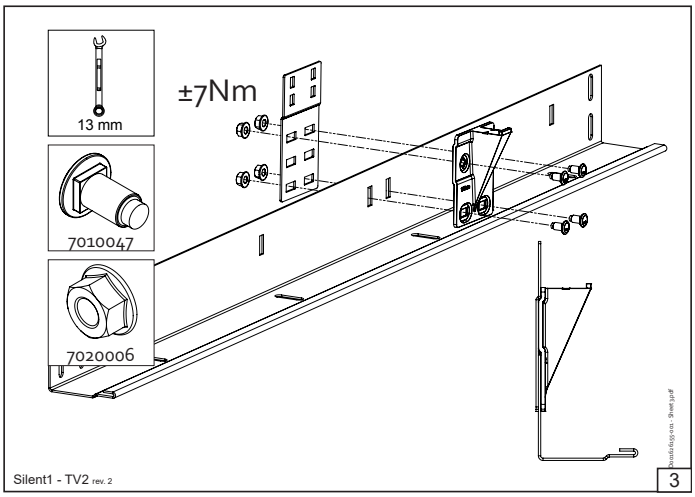

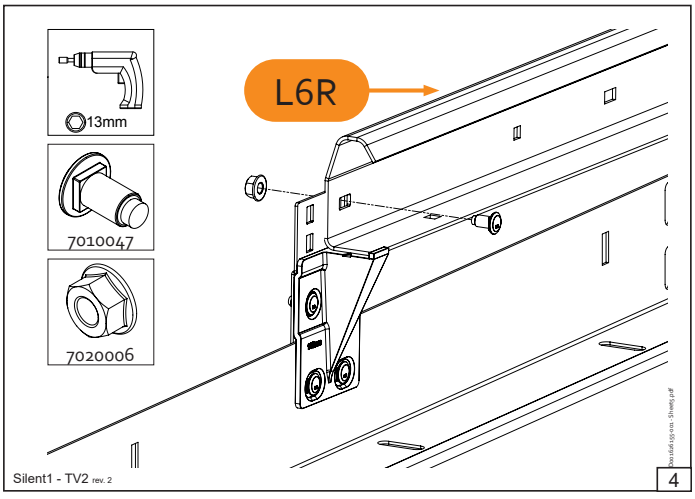

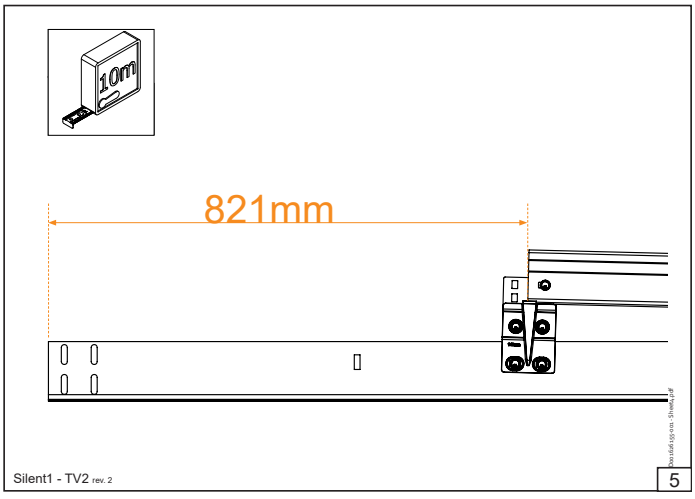


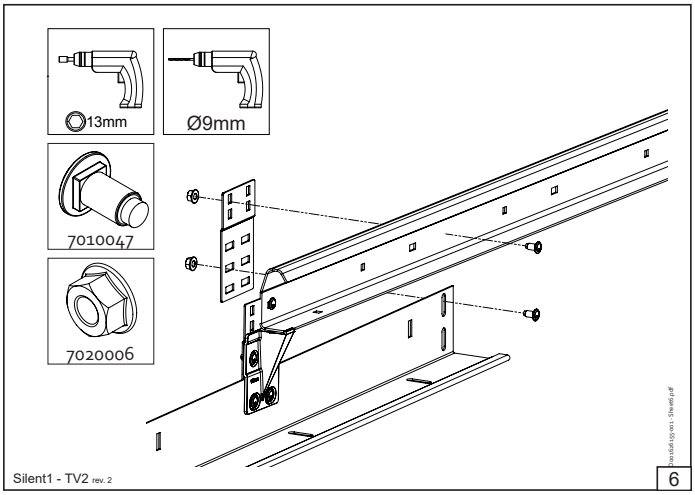

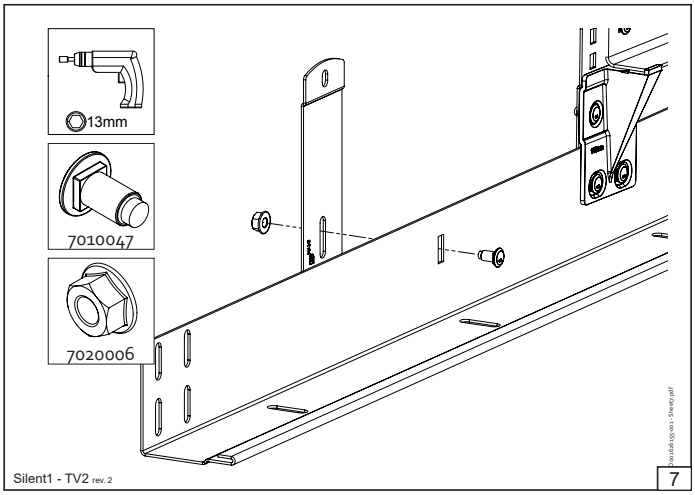



TH


Track - Horizontal

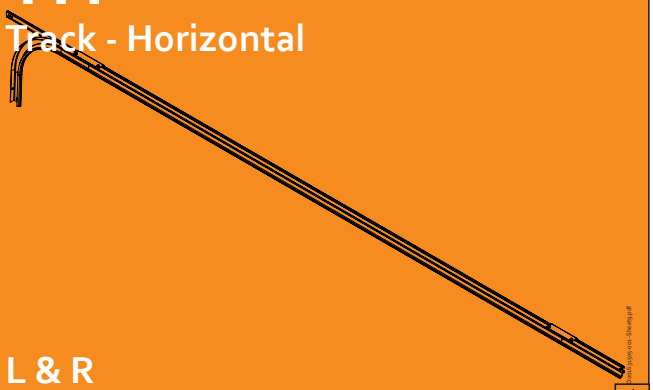



L & R

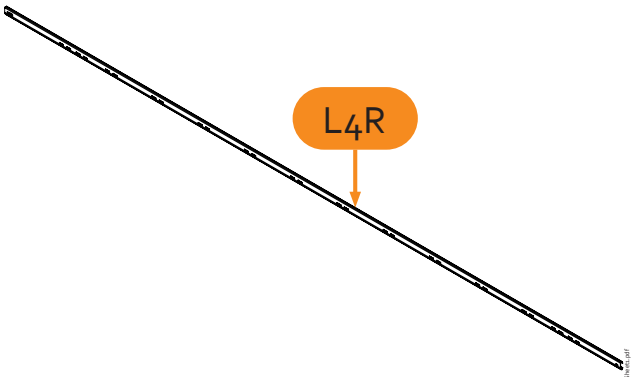

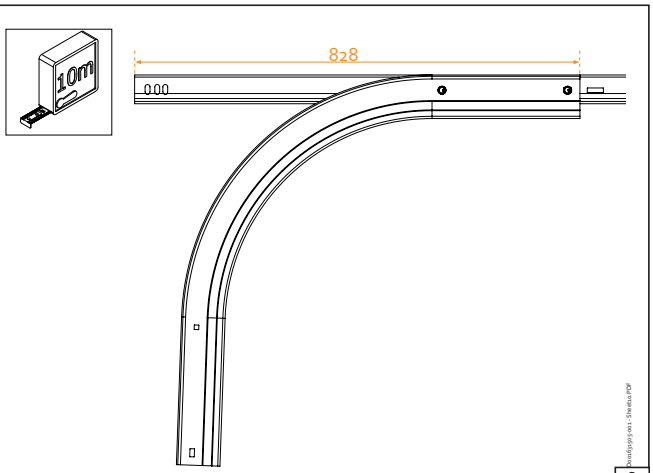


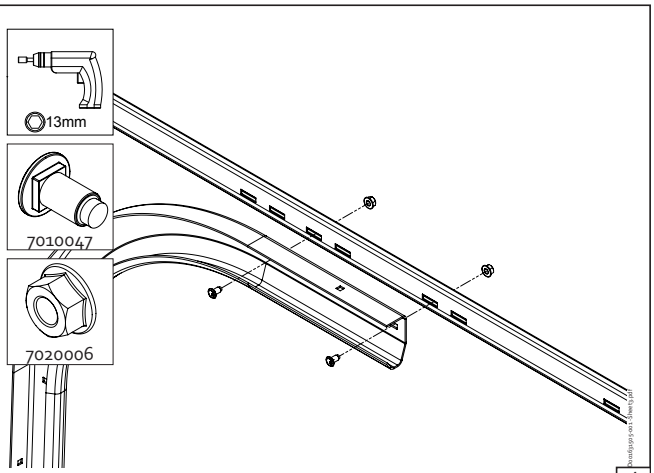

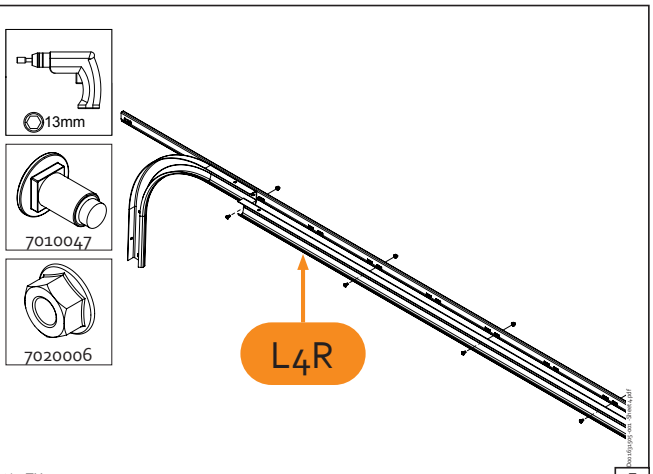

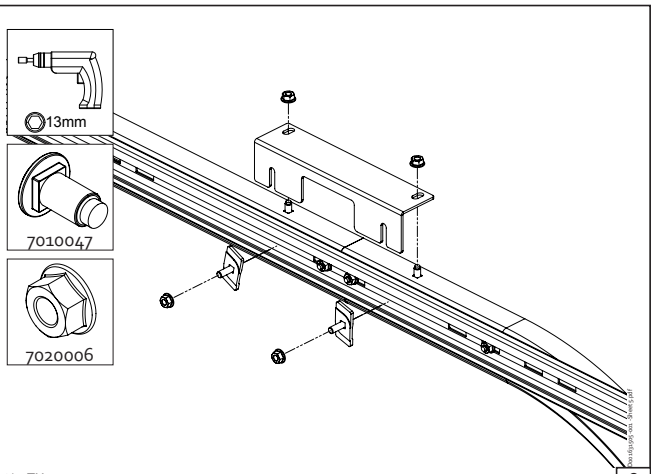


SITUATIONAL

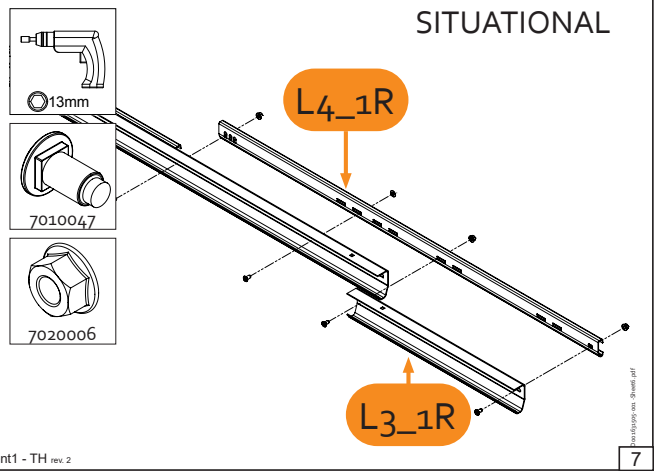

Silent1 - TH rev. 2

7

SITUATIONAL

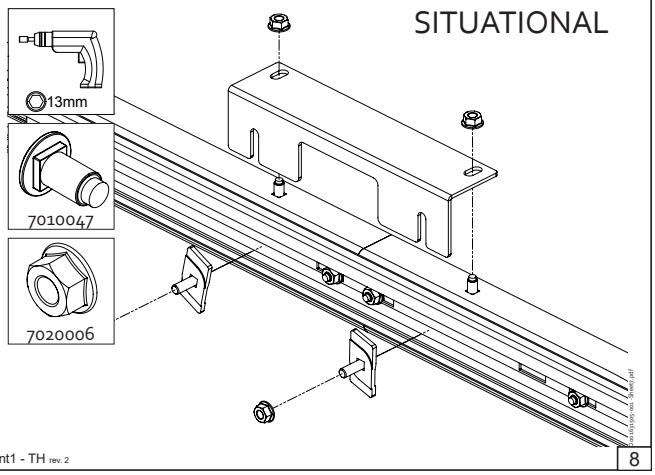


Silent1 - TH rev. 2

8


S-HL

Shaft - High Lift

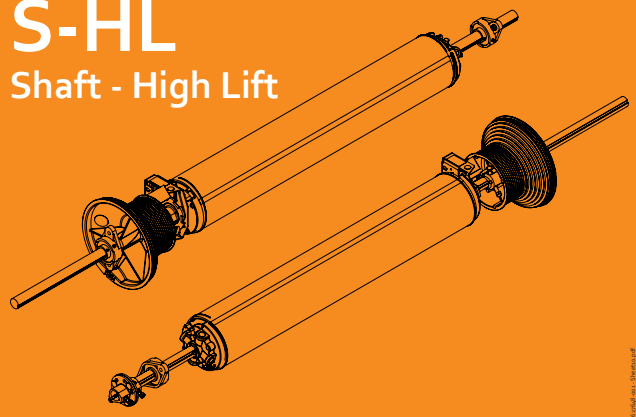


Silent1 - S-HL rev. 2

1

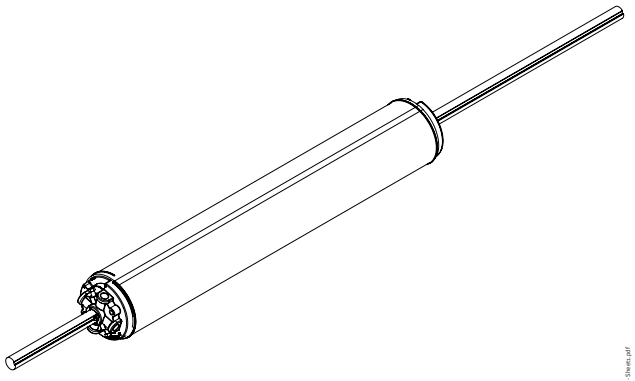


Silent1 - S-HL rev. 2

2

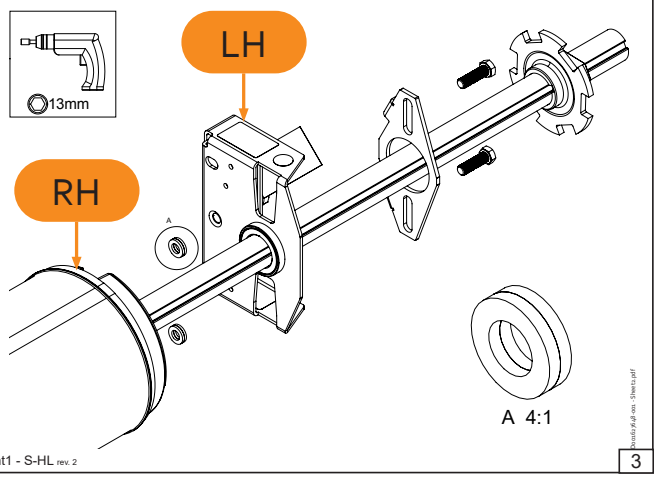


Silent1 - S-HL rev. 2

3

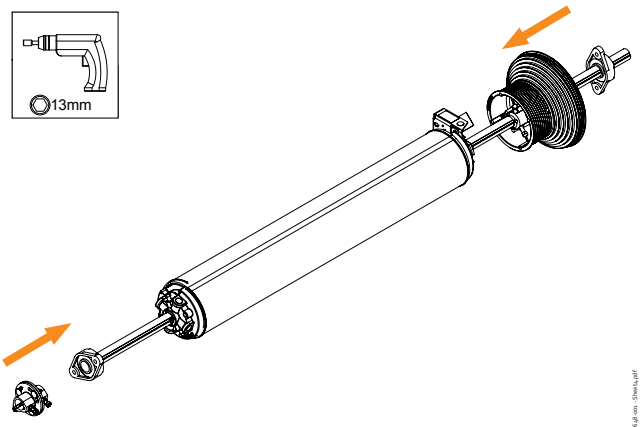

Silent1 - S-HL rev. 2

4

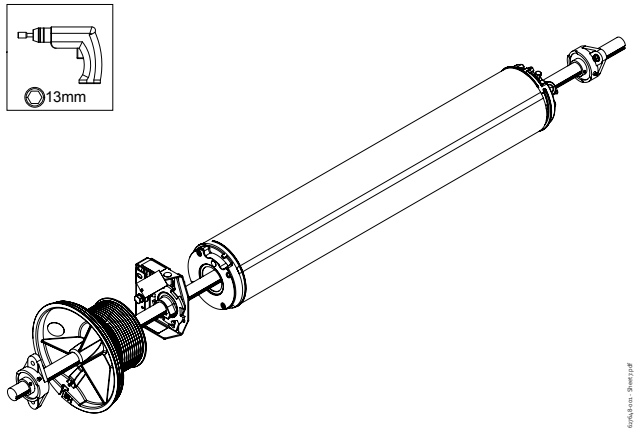


Silent1 - S-HL rev. 2

5


PM


Panel - Middle

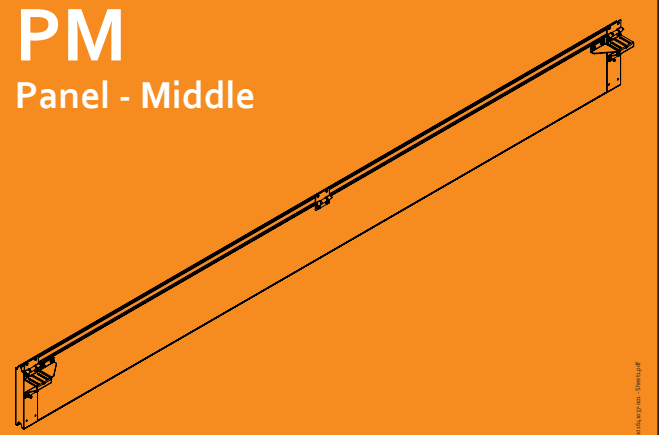



Silent1 - PM rev. 2

1

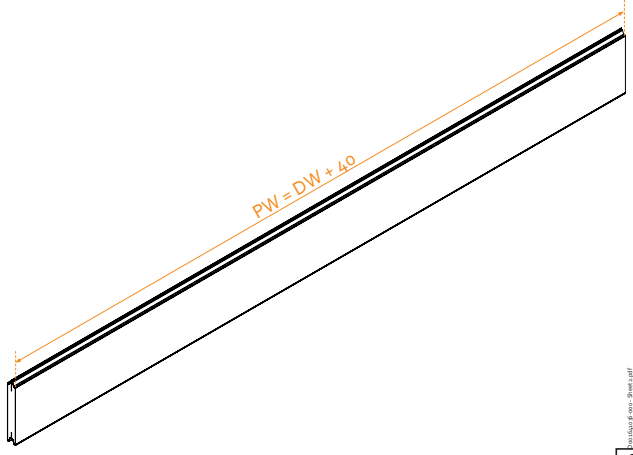


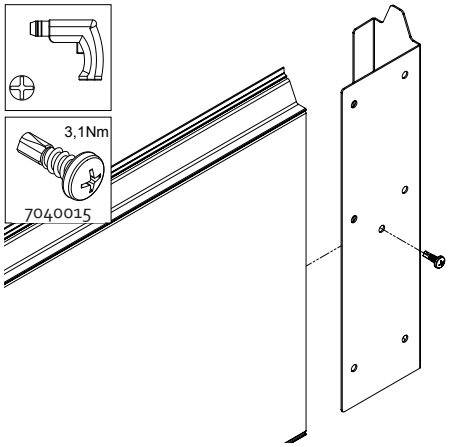


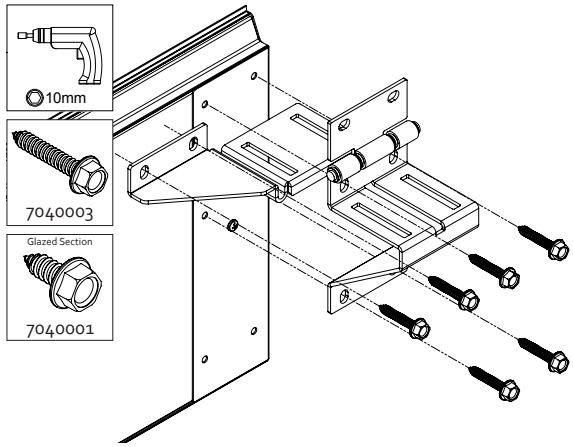


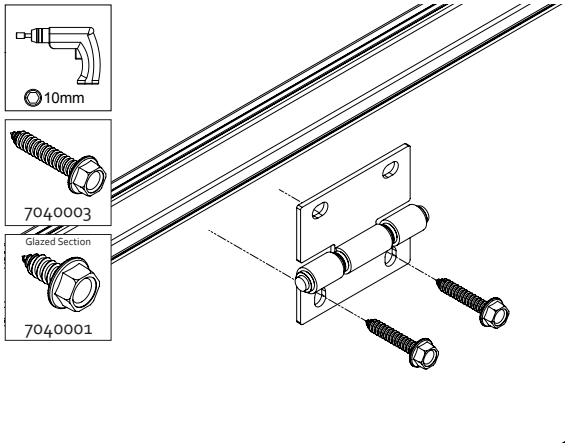



PB
Panel - Bottom

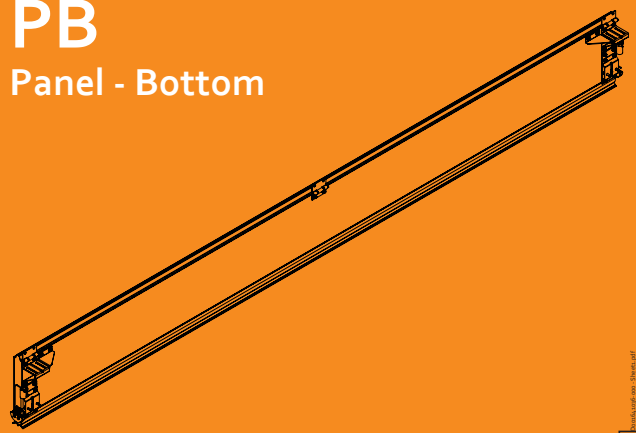

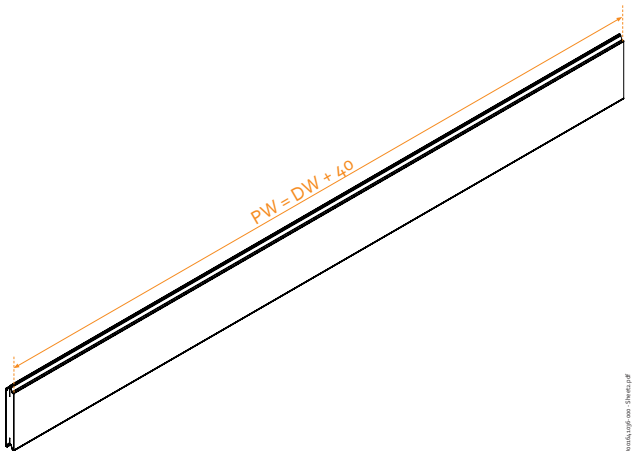


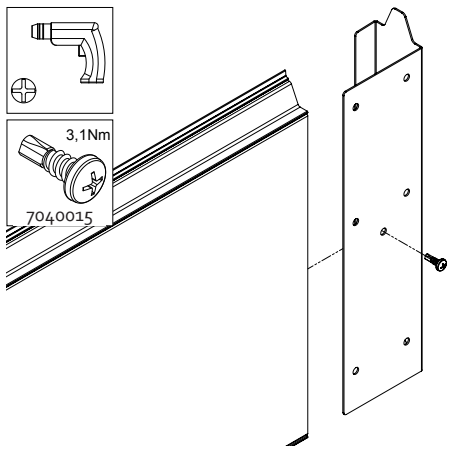


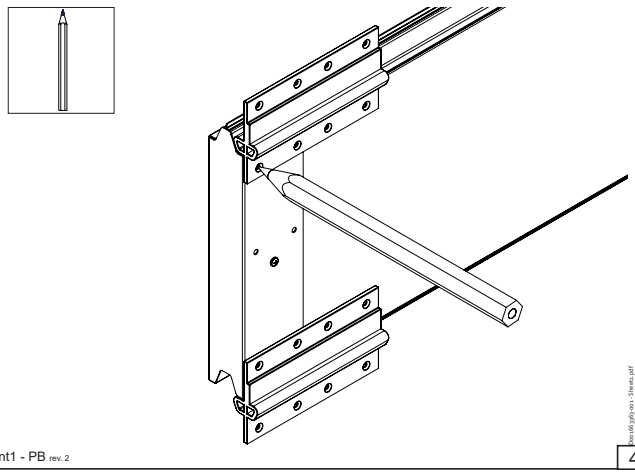






		N
DLW	< 3750mm	1
	< 5000mm	2
	< 7000mm	3

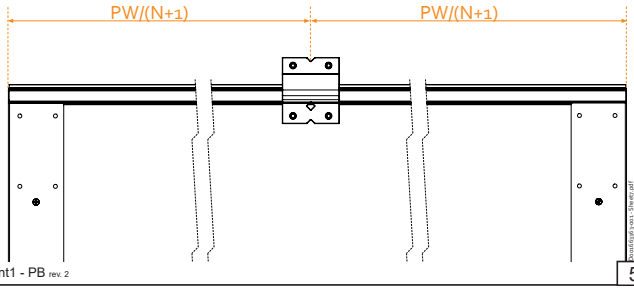







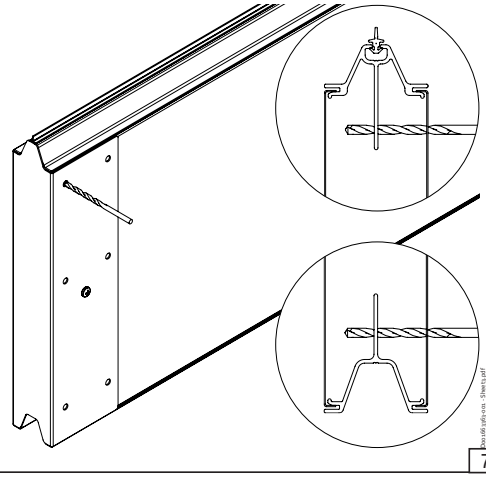









* <1000mm




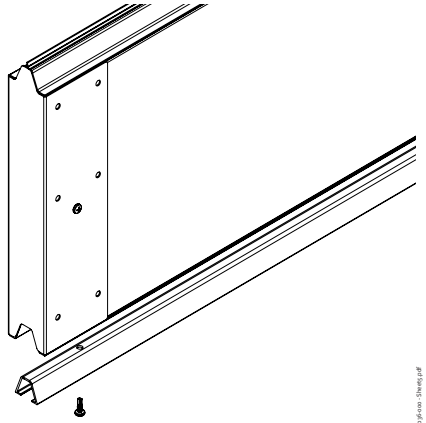


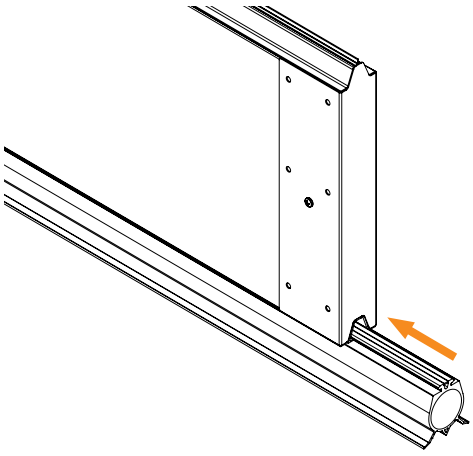


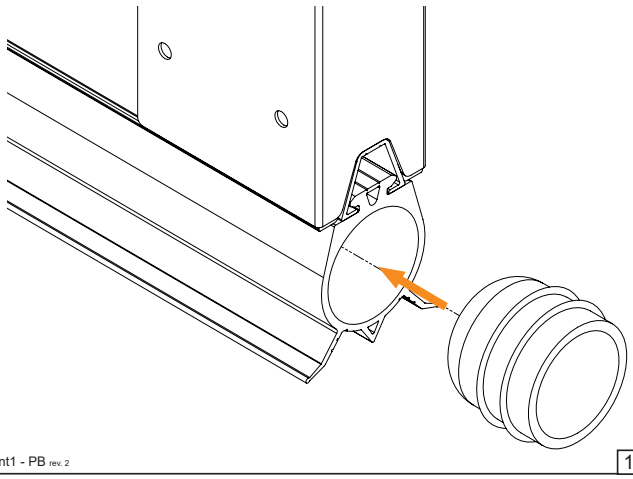


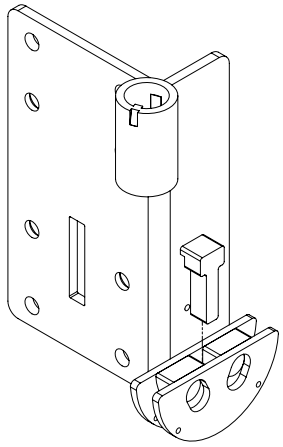


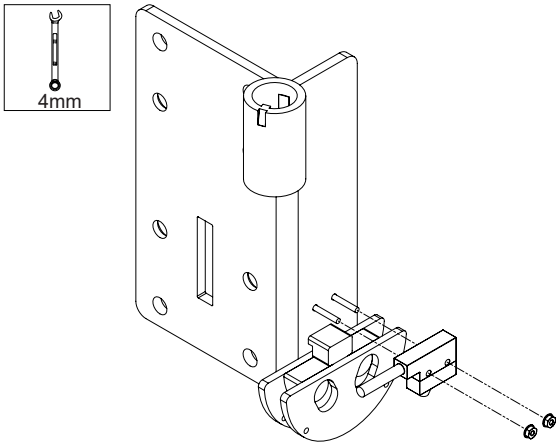

4mm

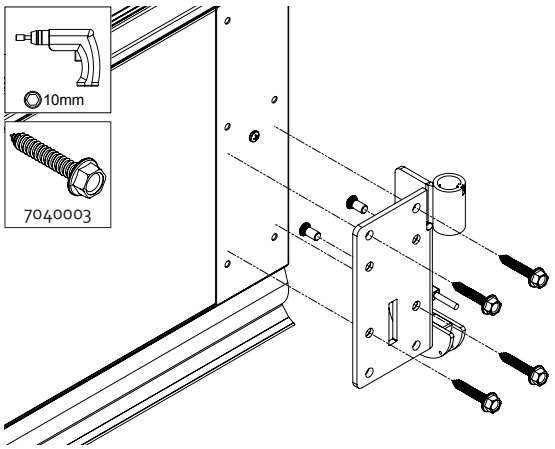

10mm
7040003

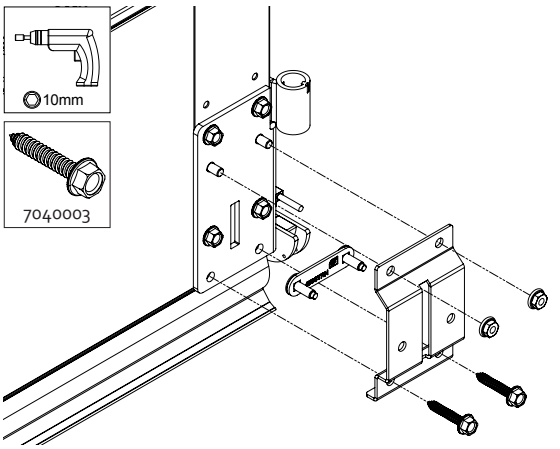
10mm
7040003

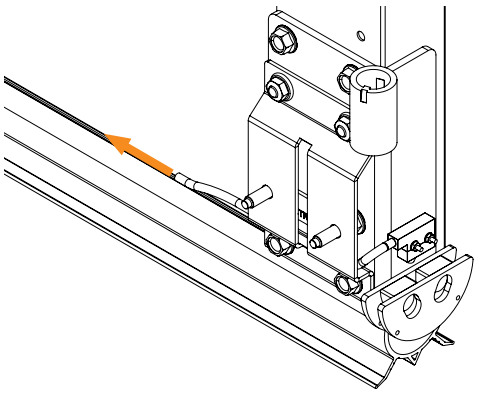

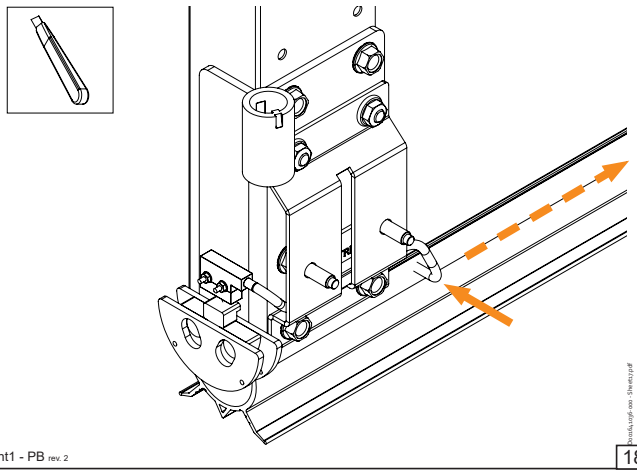


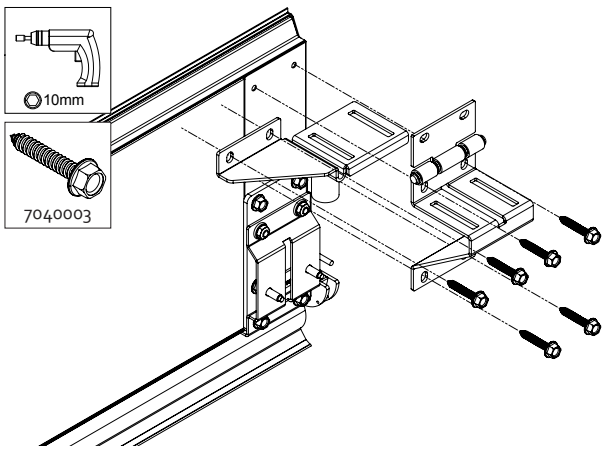

10mm
7040003

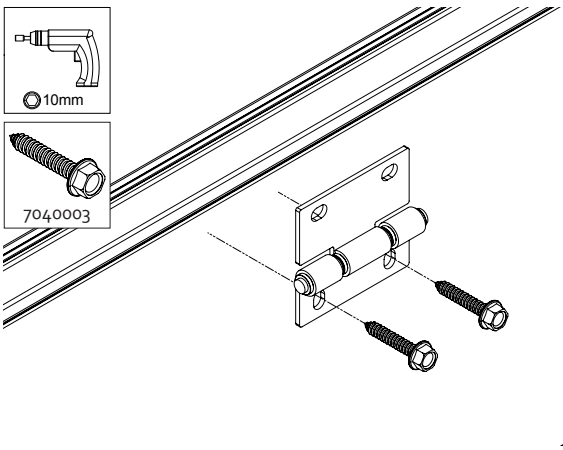

10mm
7040003


PT-1-HL / PT-1-VL


Panel Top - Configuration 1
High Lift & Vertical Lift

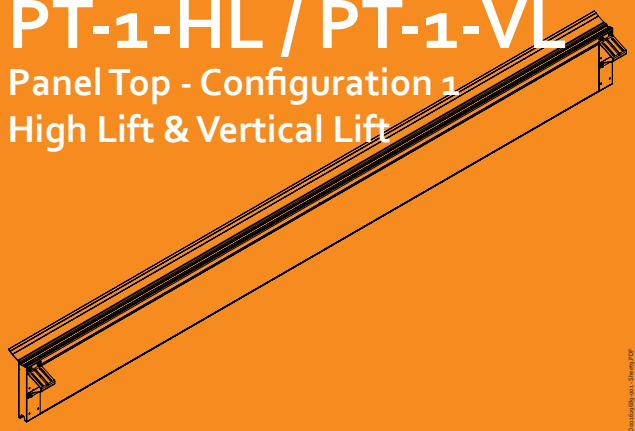


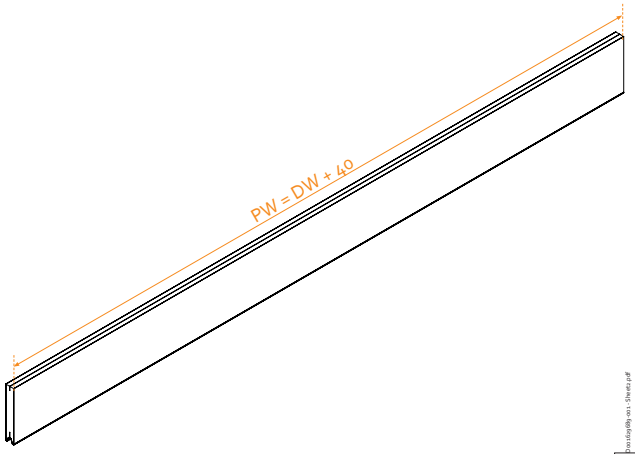


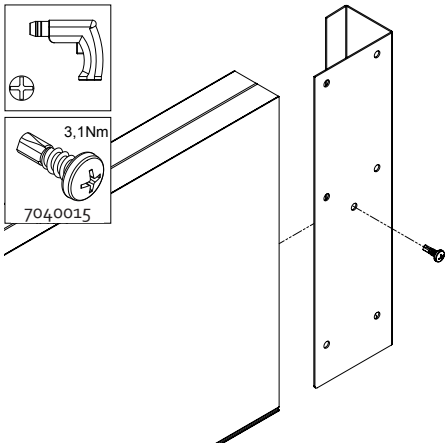


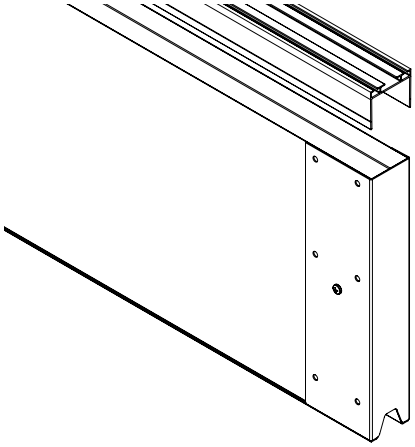

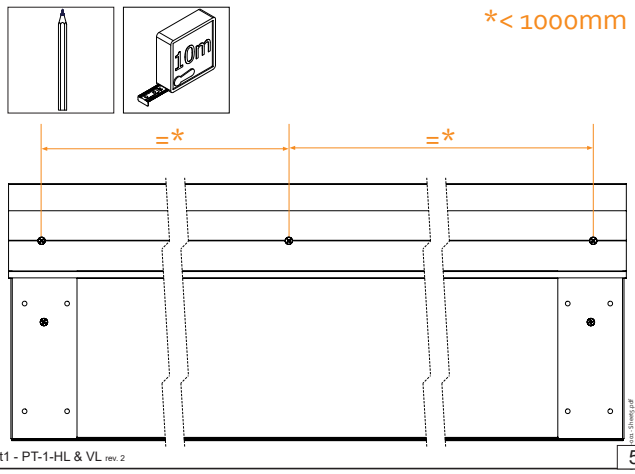

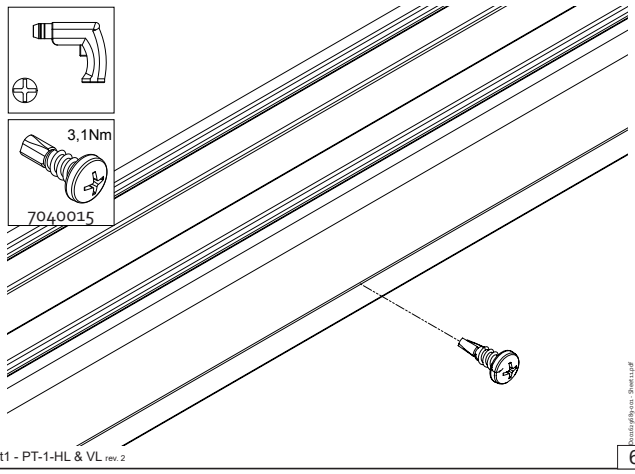


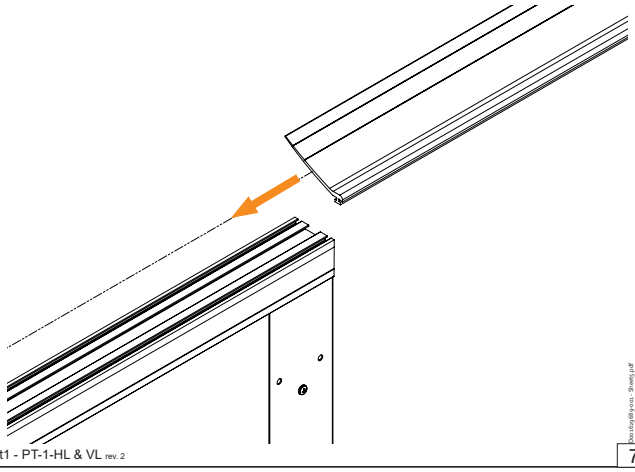


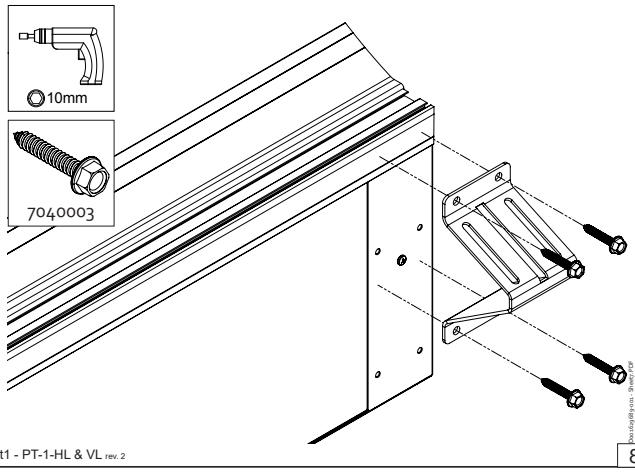



PT-2-HL / PT-2-VL


Panel Top - Configuration 2
High Lift & Vertical Lift

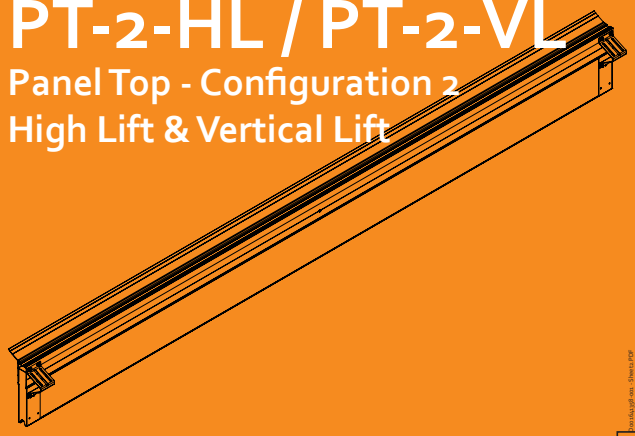


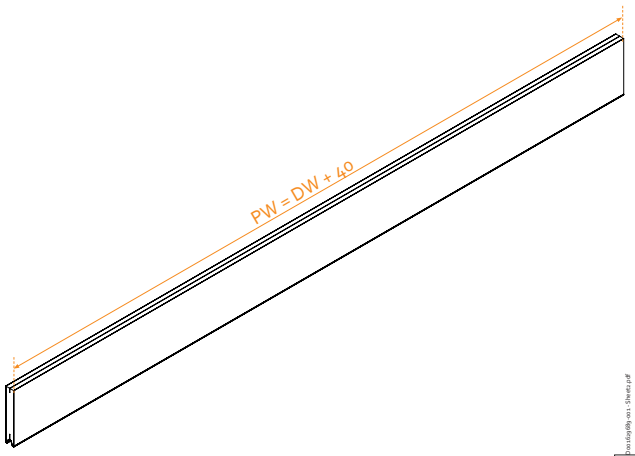


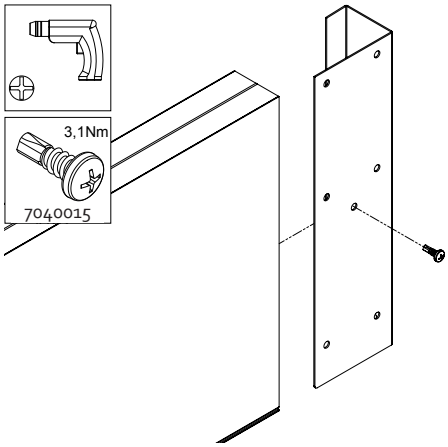


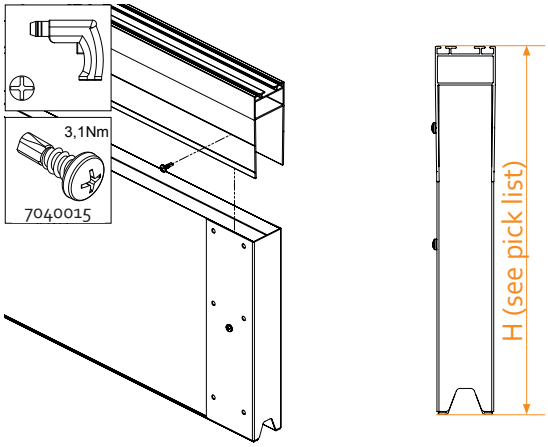

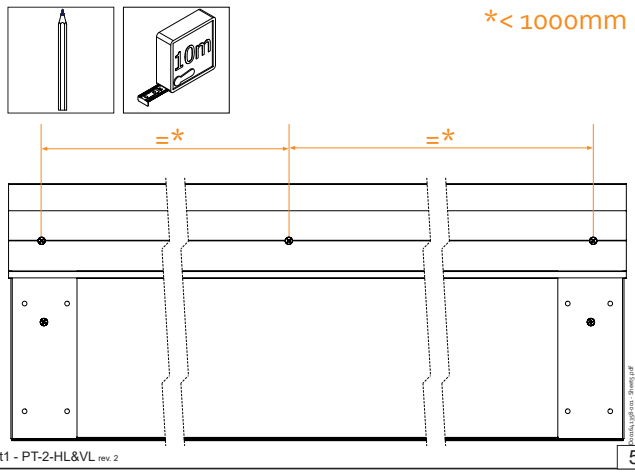

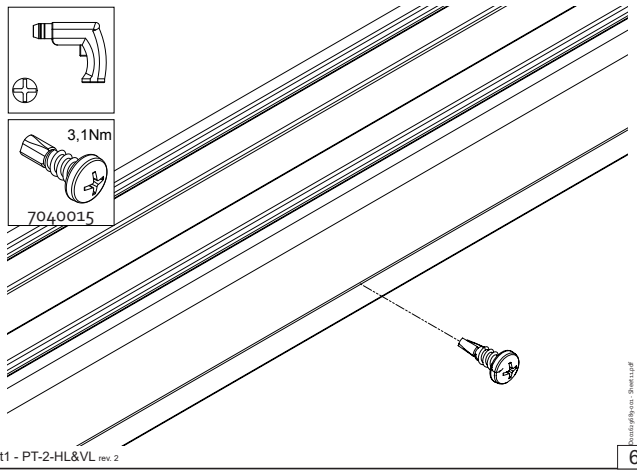

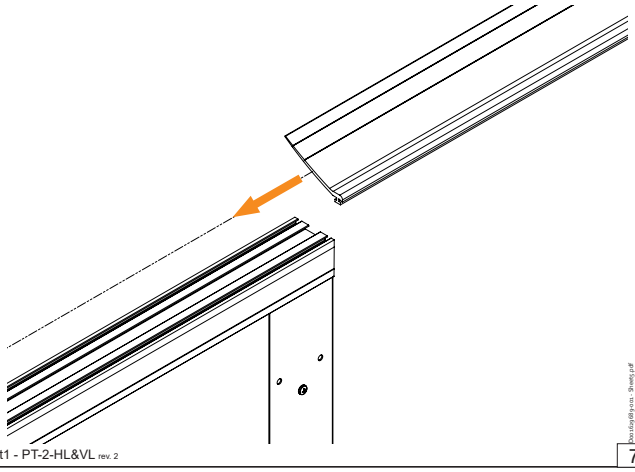


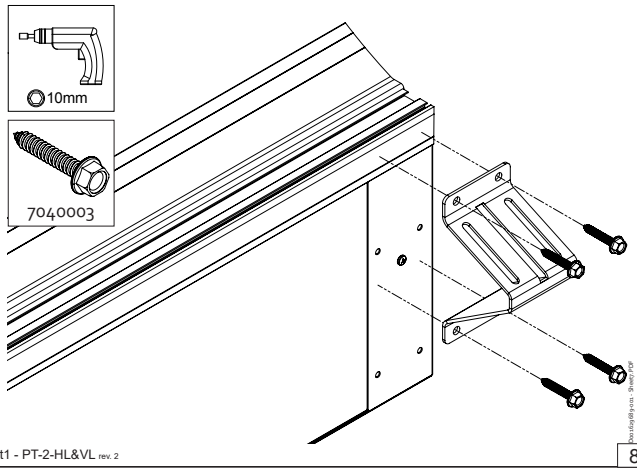



PT-3-HL / PT-3-VL


Panel Top - Configuration 3


High Lift & Vertical Lift

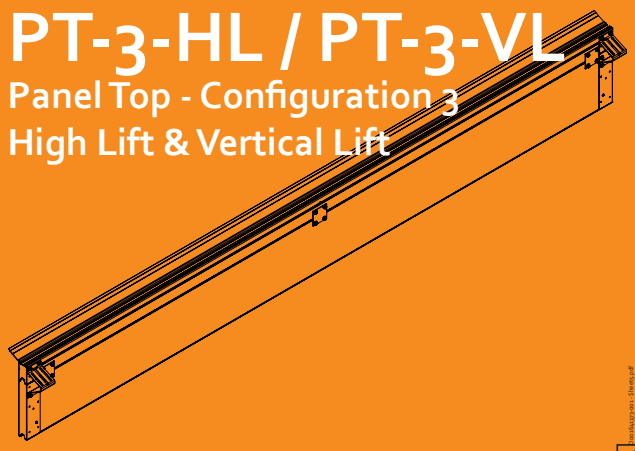


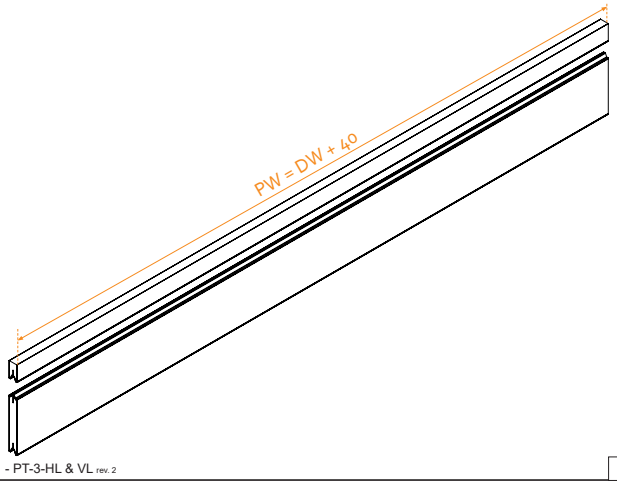


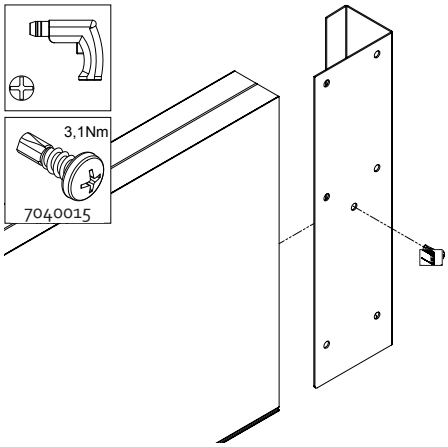


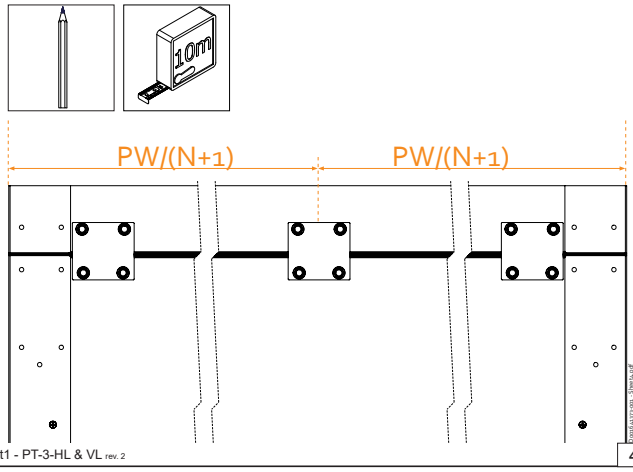


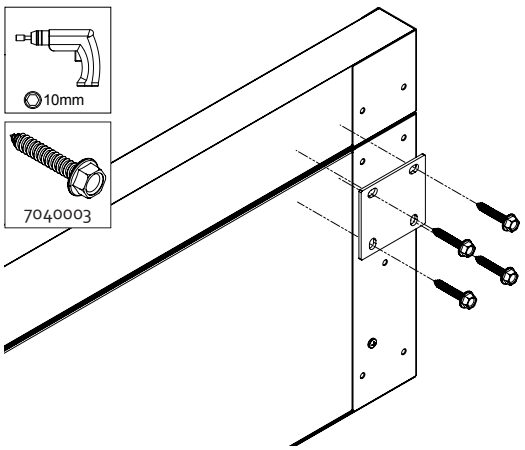


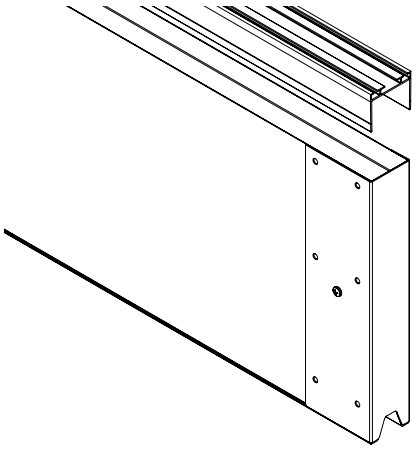

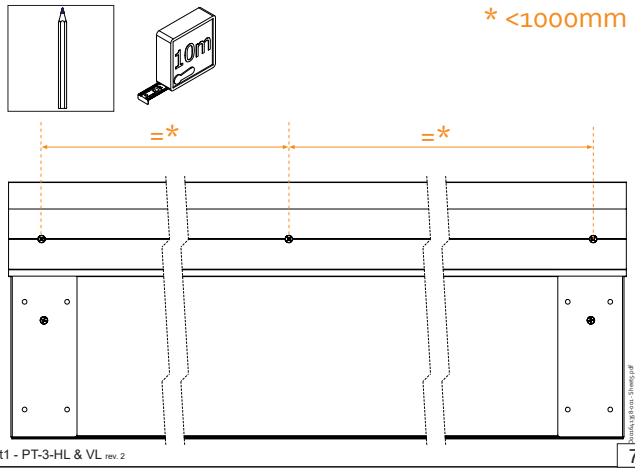


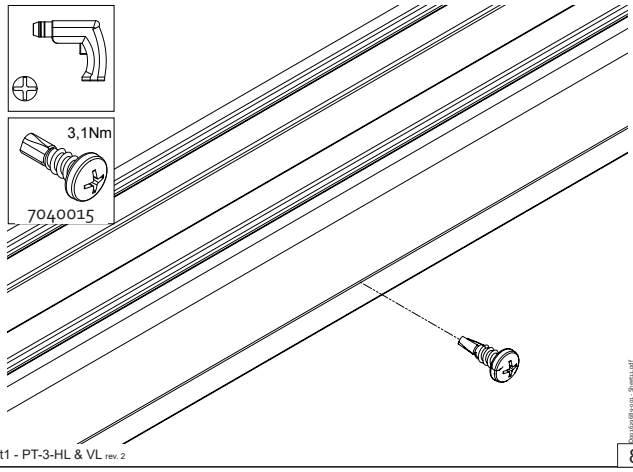

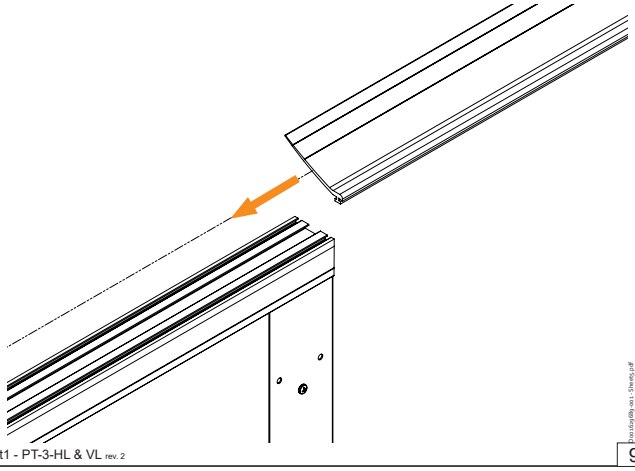


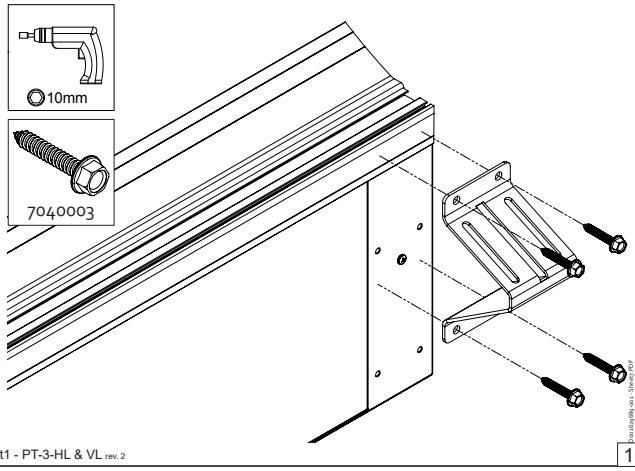


SBA
Spring Bumper Assembly

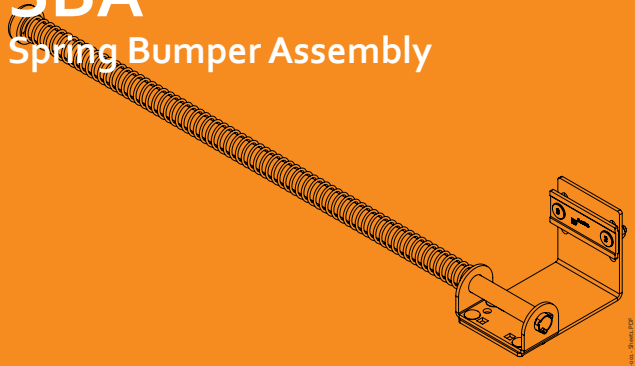



L&R

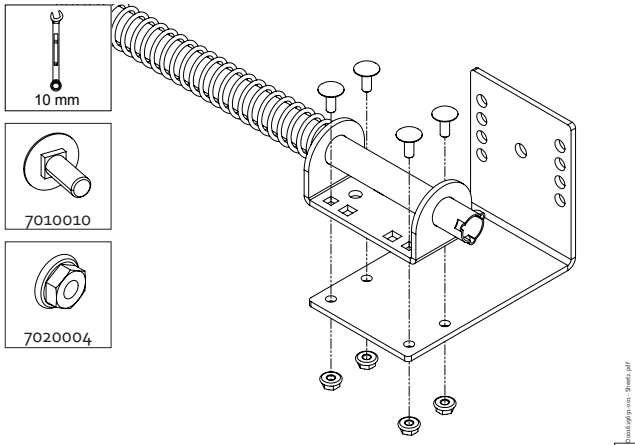


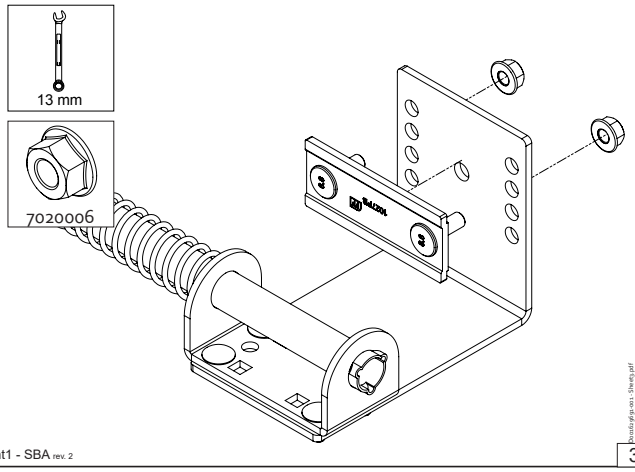



RSA
Rear Suspension Assembly

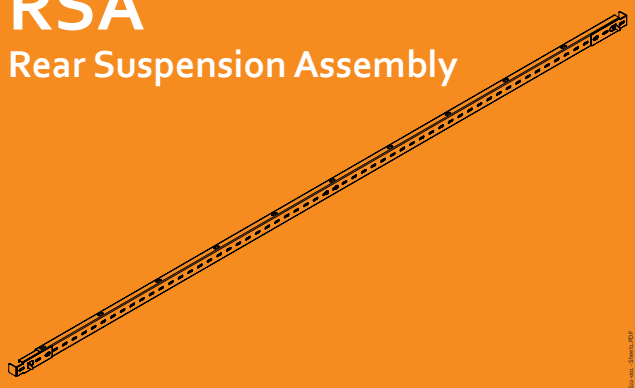

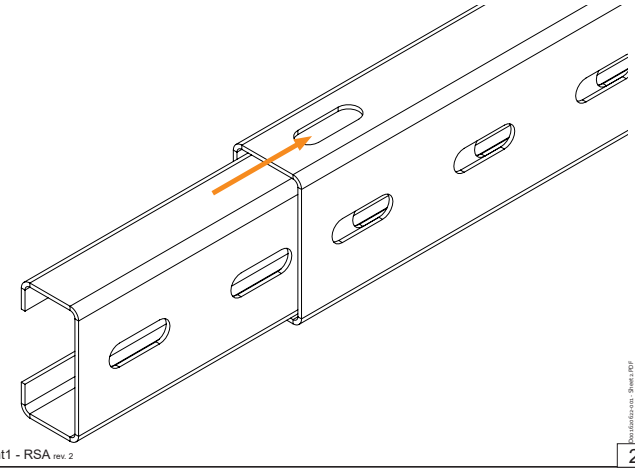

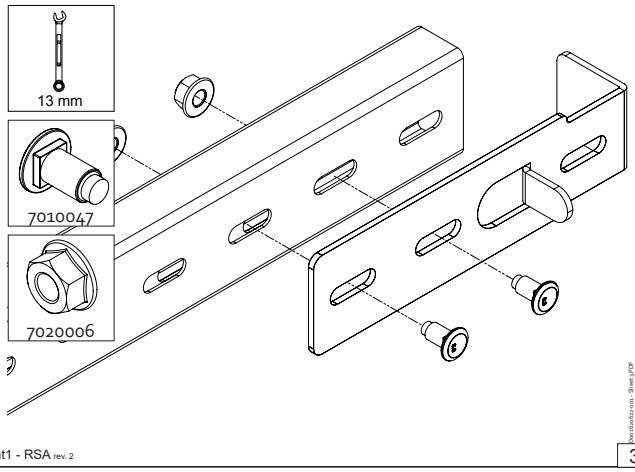


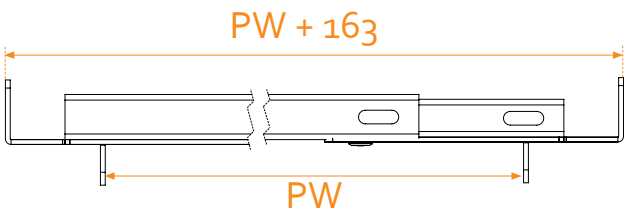

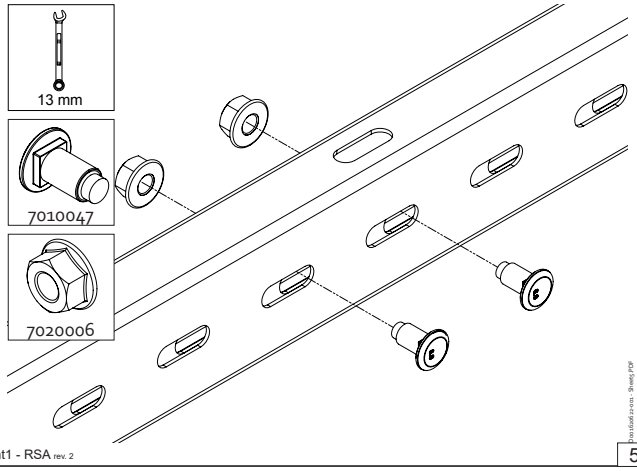



HSA

Horizontal Suspension Assembly

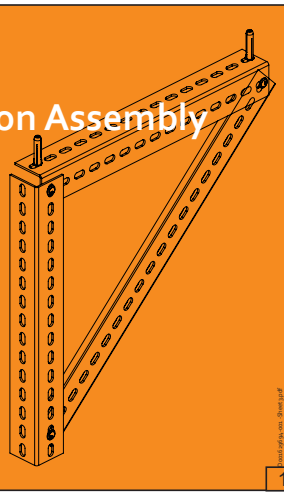


L&R

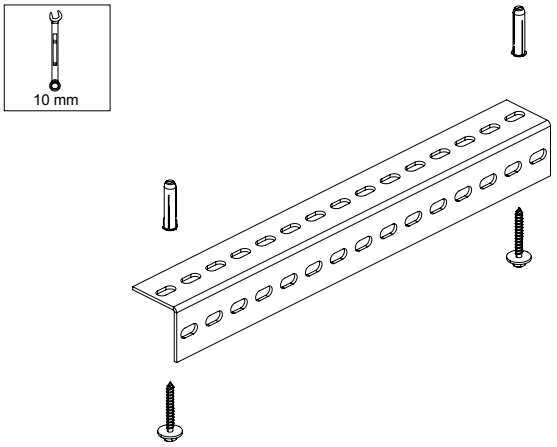


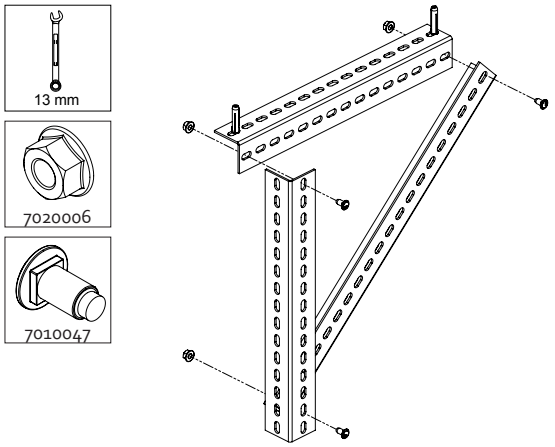



HL

High Lift

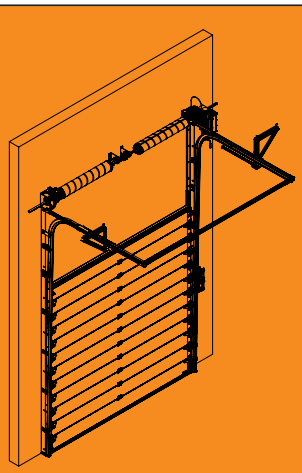

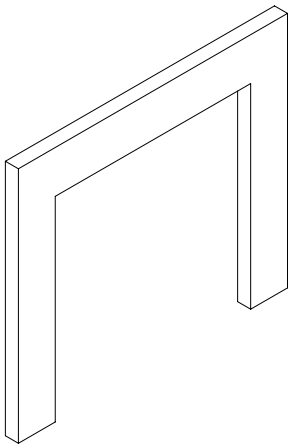

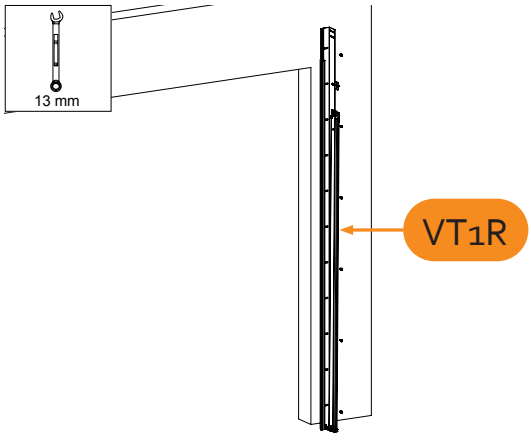




DW


DW + 163*

* = RSA




RSA

VT1L




VT2R







HTR

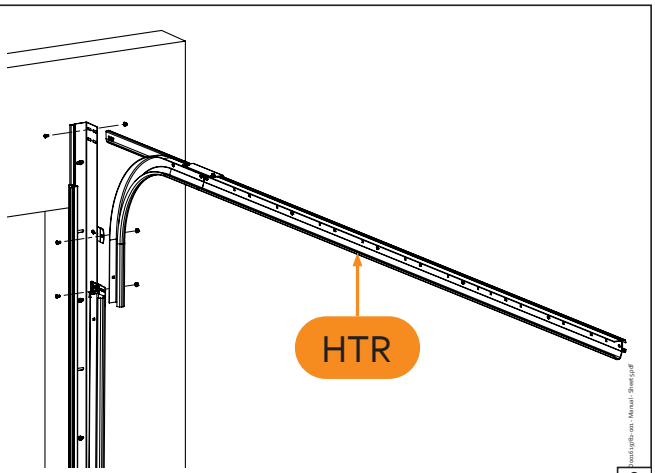





CS

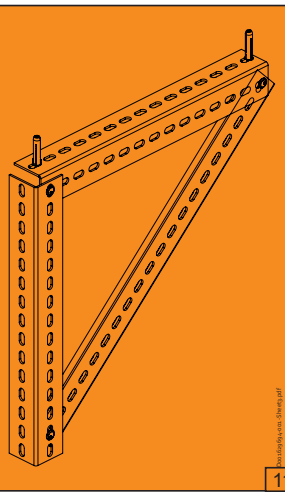


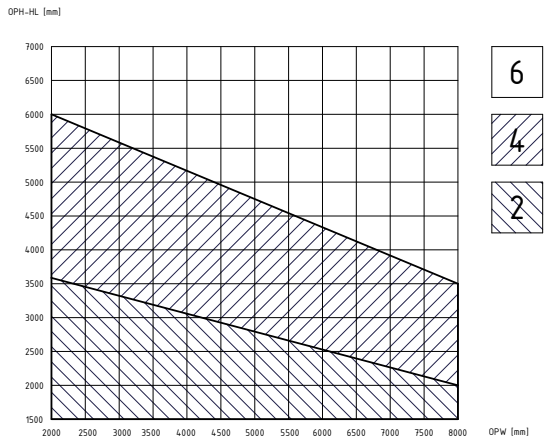
OPH-HL [mm]
7000
6500
6000
5500
5000
4500
4000
3500
3000
2500
2000
1500
2000 2500 3000 3500 4000 4500 5000 5500 6000 6500 7000 7500 8000
OPW [mm]
6
4
2

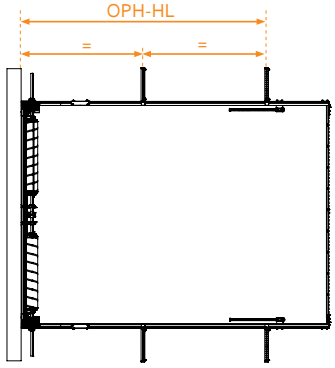

OPH-HL
=
=

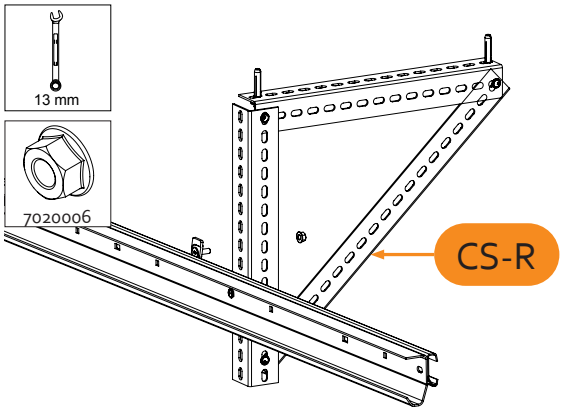

13 mm
7020006
CS-R

SBA

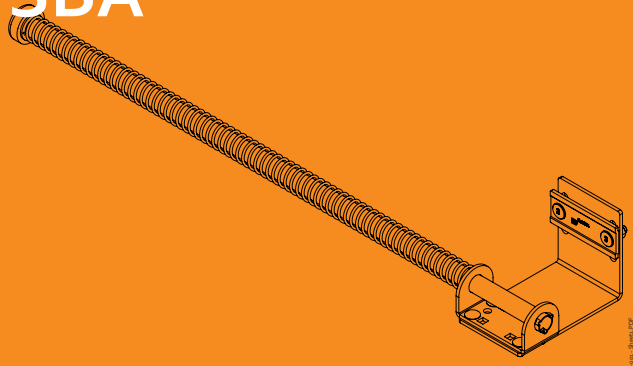


L&R

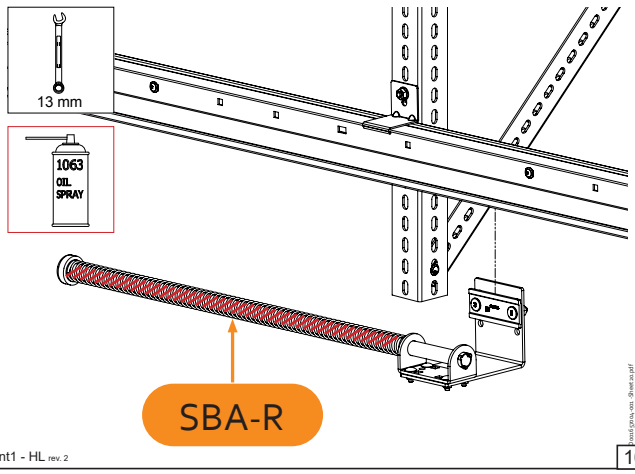

13 mm
1063
OIL
SPRAY
SBA-R

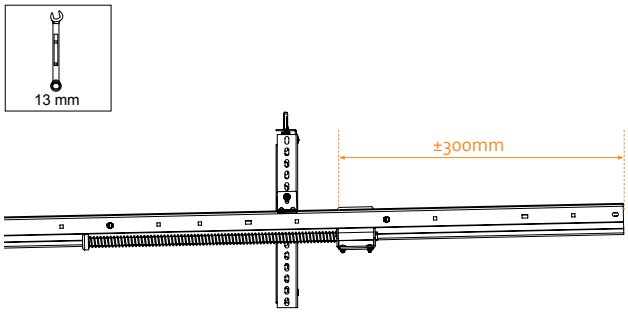

13 mm
±300mm


RSA

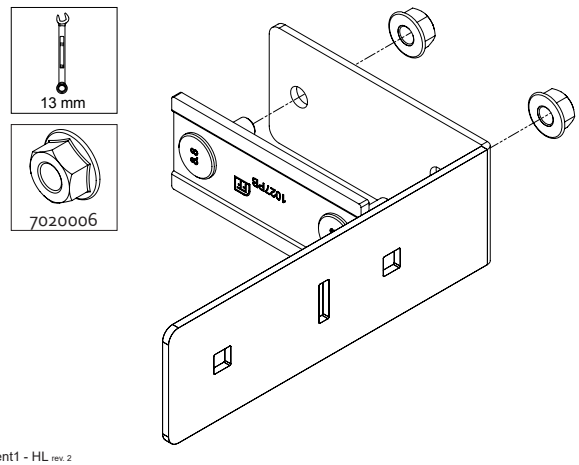




13 mm
7020006

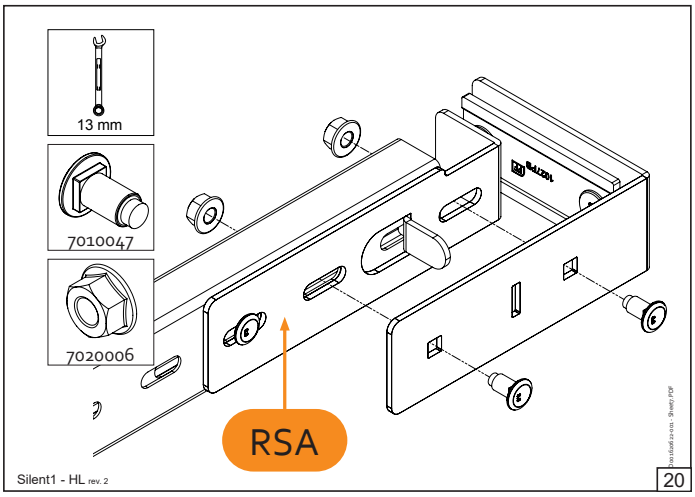

13 mm
7010047
7020006
RSA

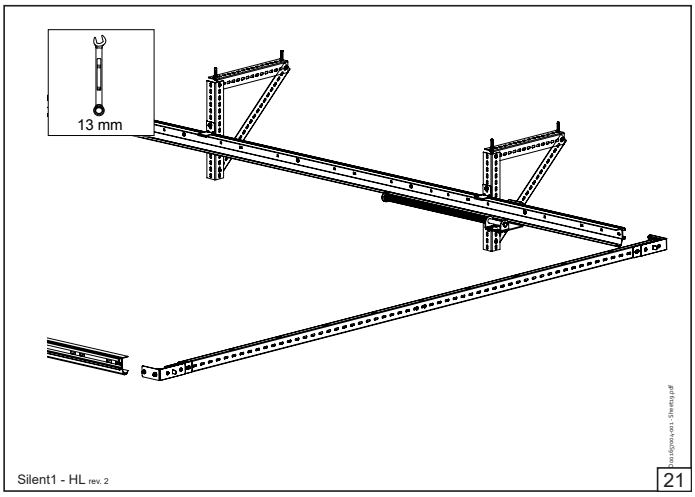

13 mm

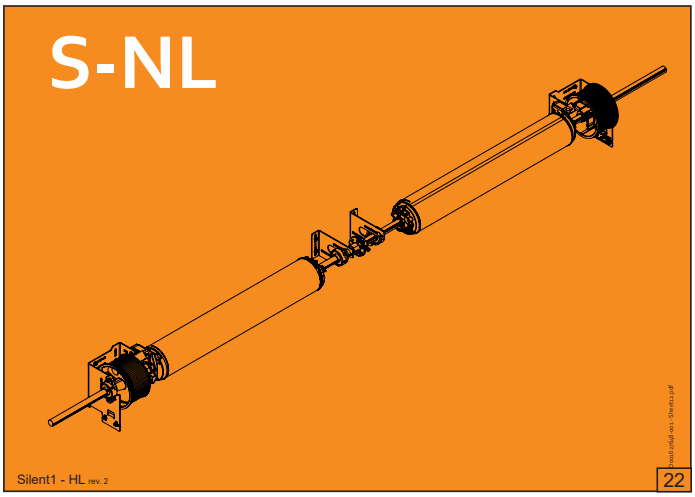

S-NL

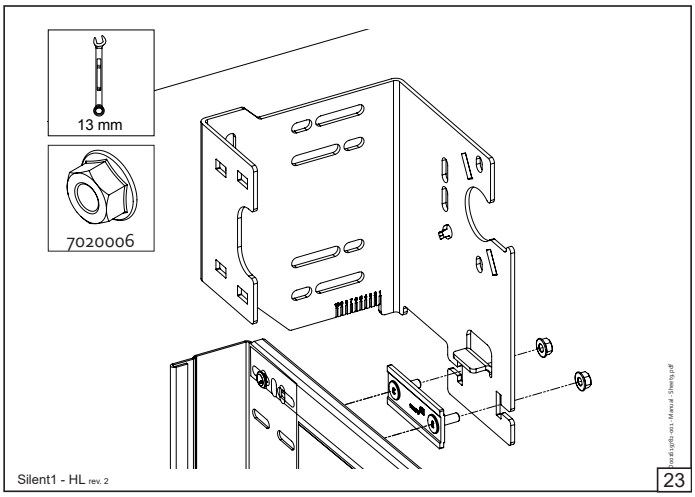

13 mm
7020006

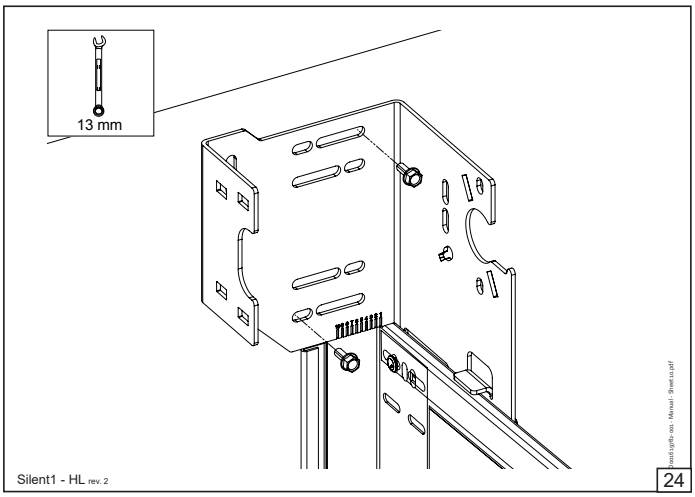

13 mm

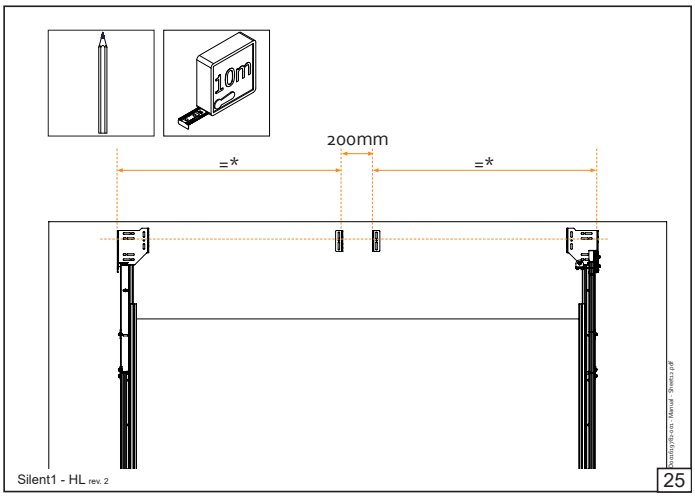

10mm
200mm
=*
=*

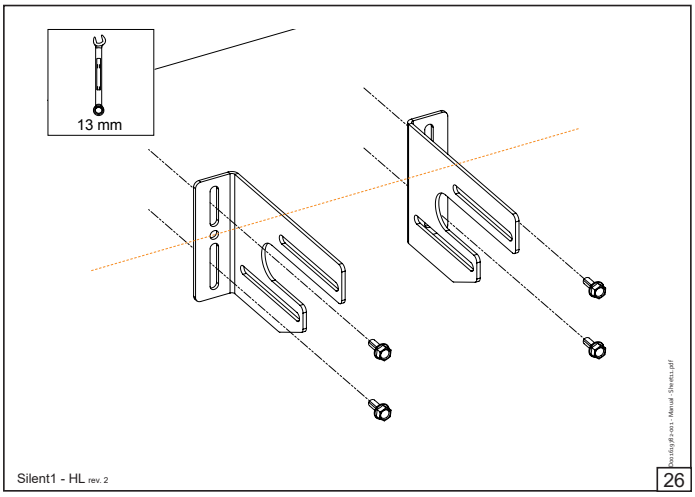

13 mm

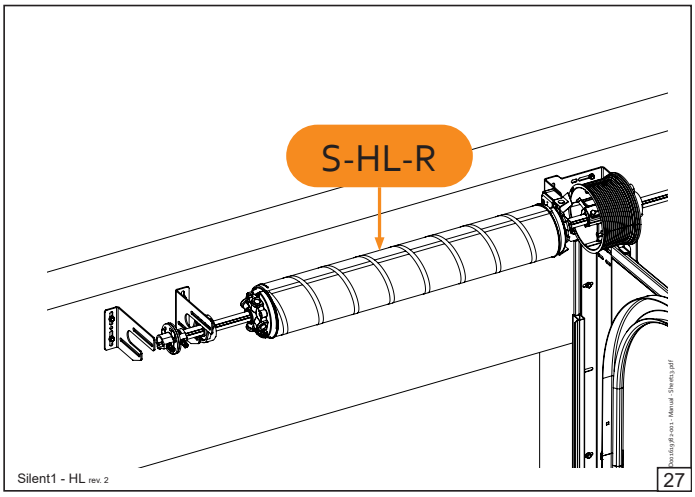

S-HL-R

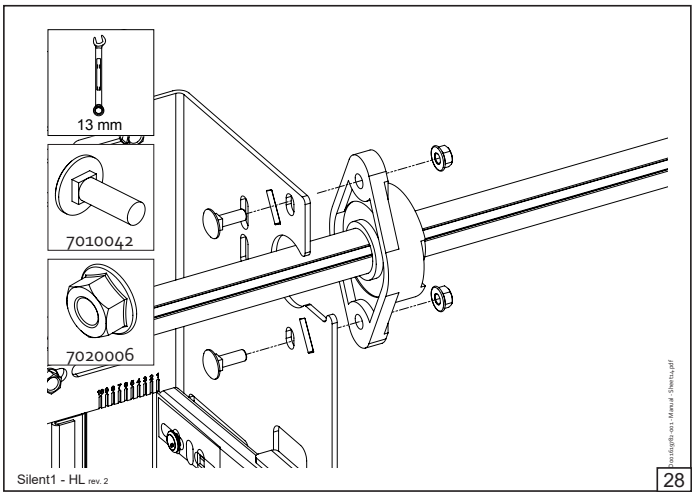

13 mm
7010042
7020006

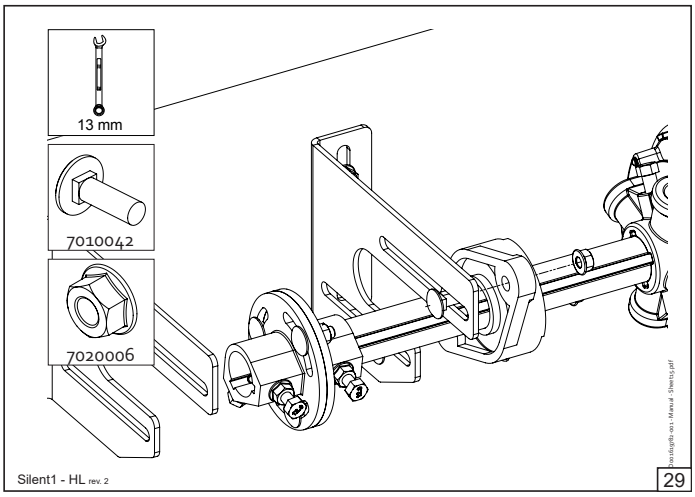

13 mm
7010042
7020006

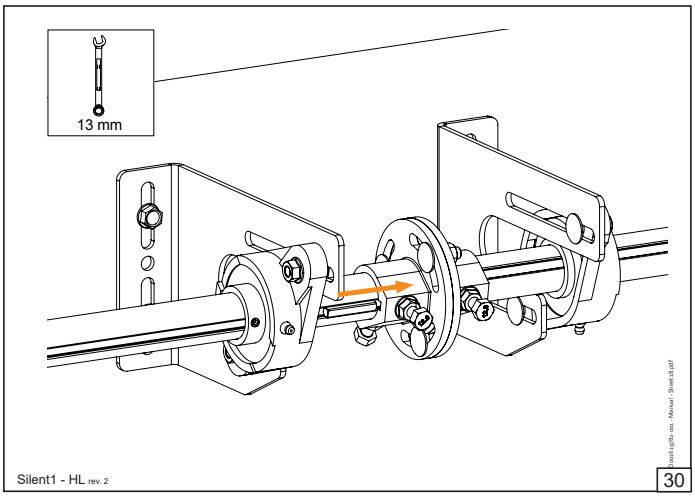

13 mm

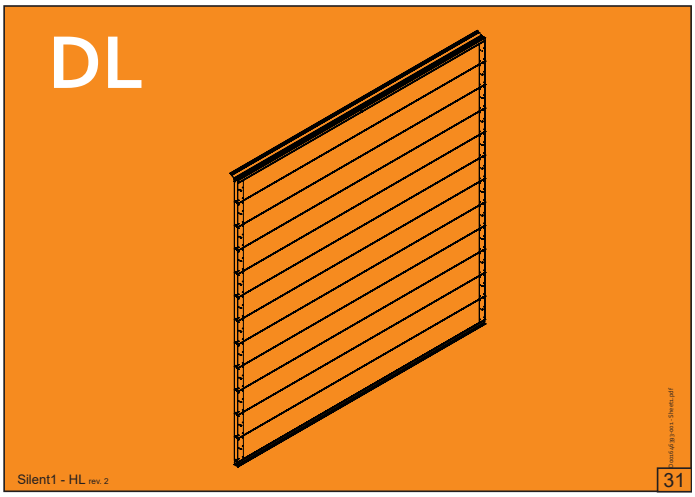

DL

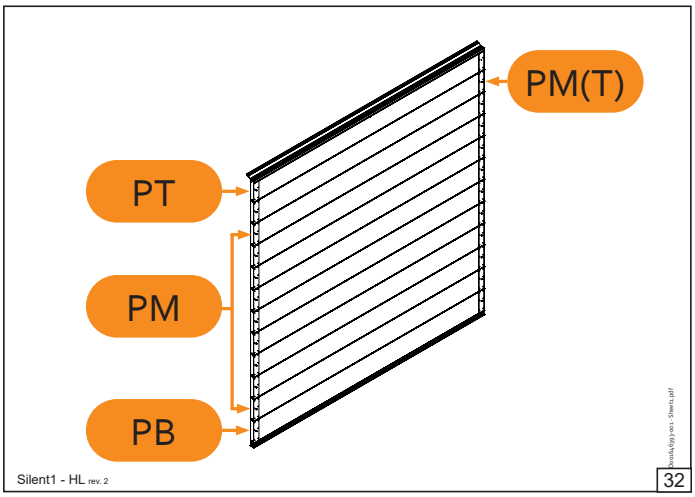

PM(T)
PT
PM
PB

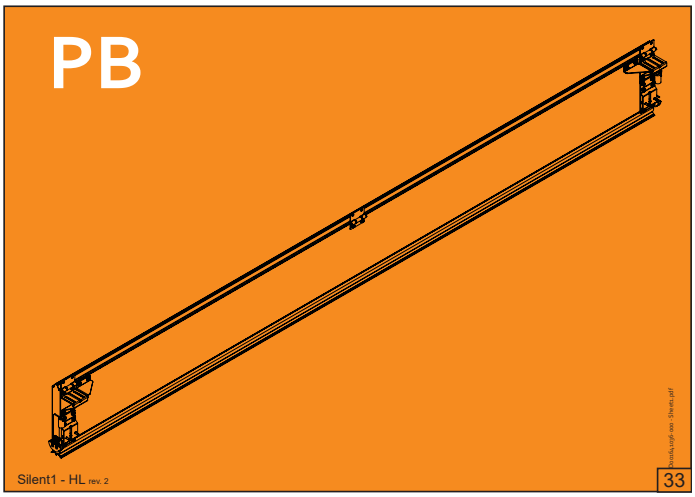

PB

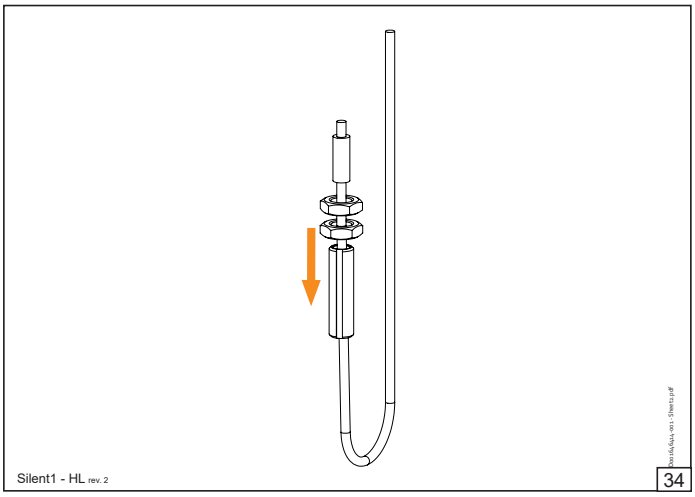

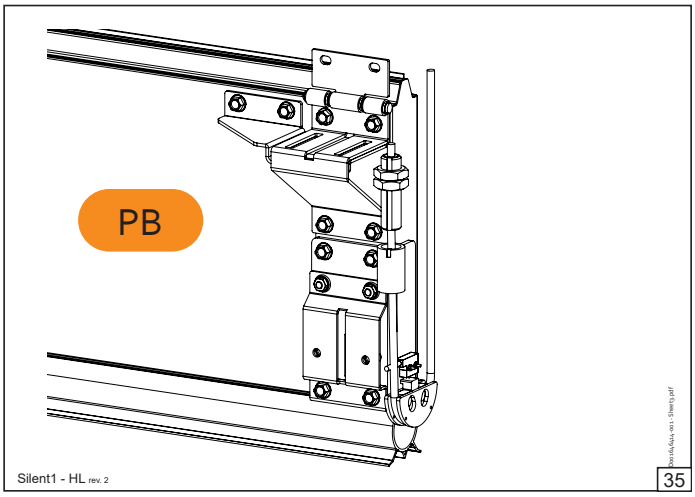

PB

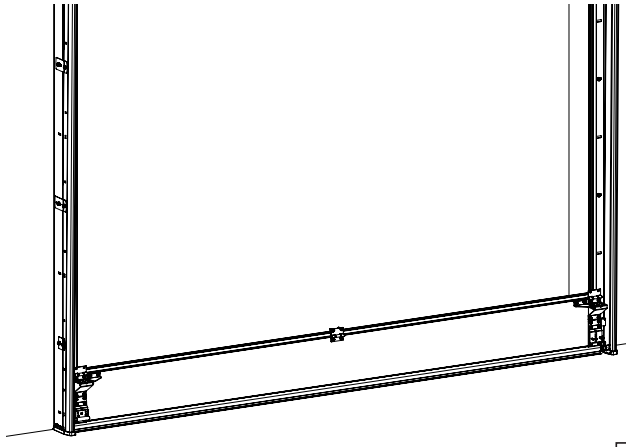


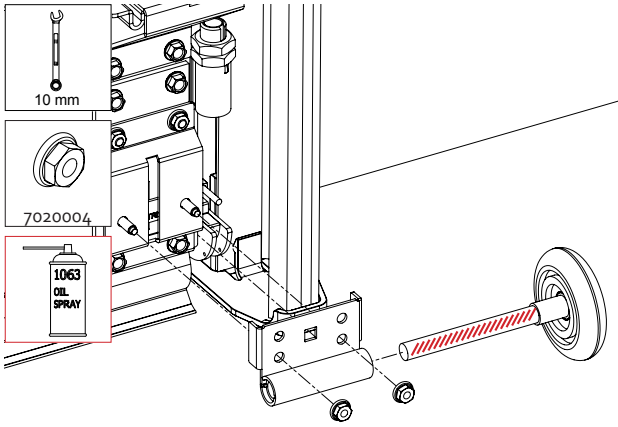

10 mm
7020004
1063
OIL
SPRAY

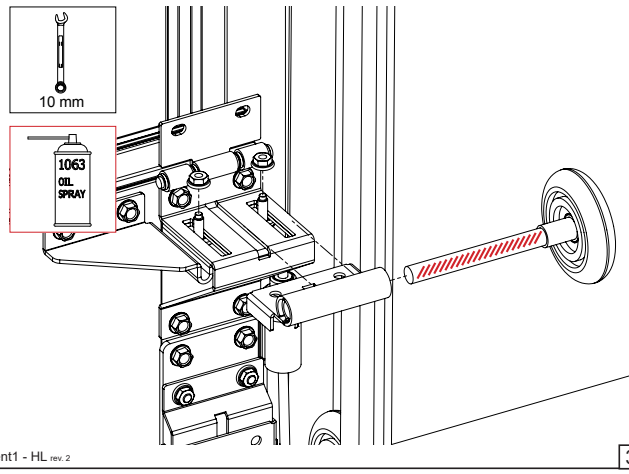

10 mm
1063
OIL
SPRAY


PM

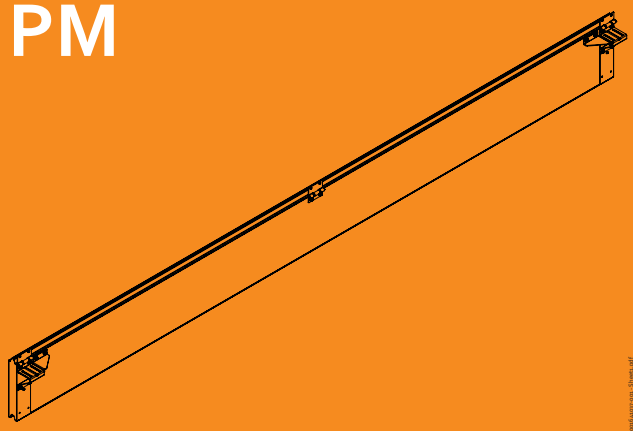


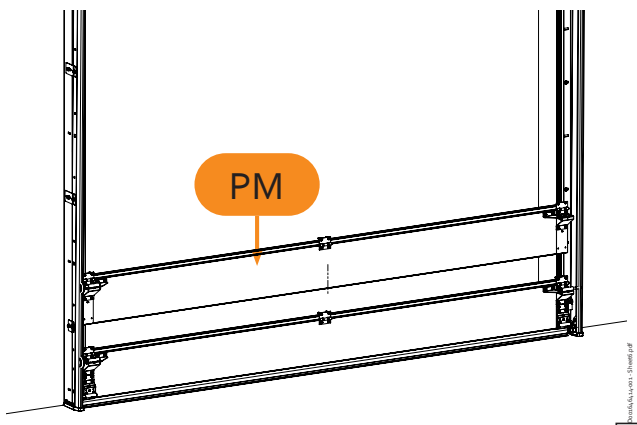
PM

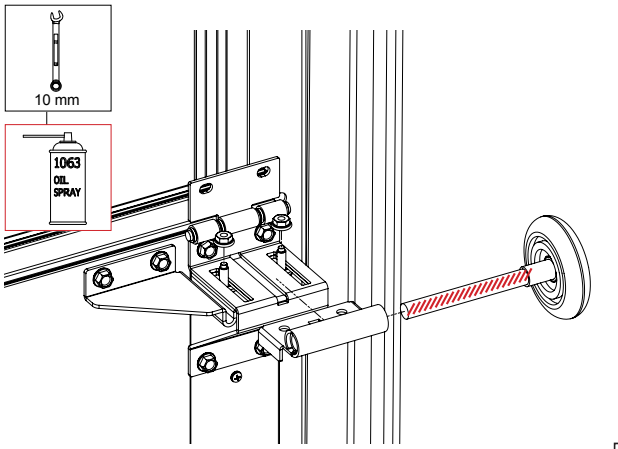

10 mm
1063
OIL
SPRAY

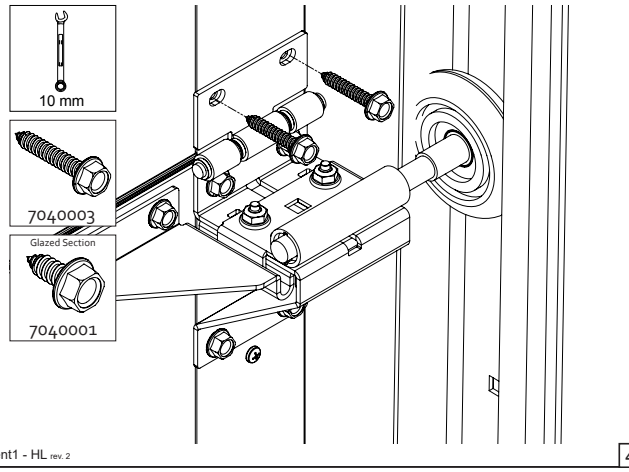

10 mm
7040003
Glazed Section
7040001

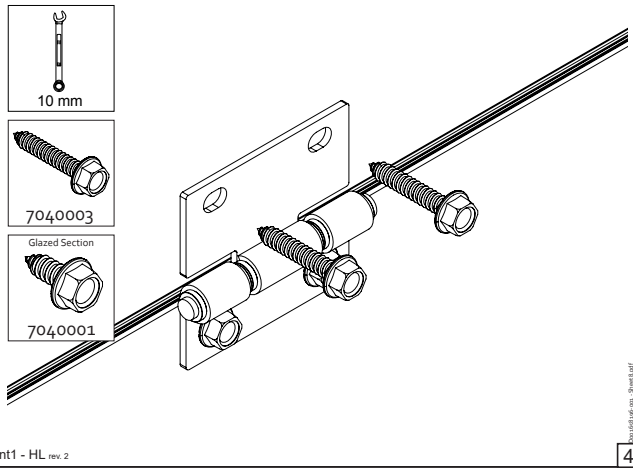

10 mm
7040003
Glazed Section
7040001

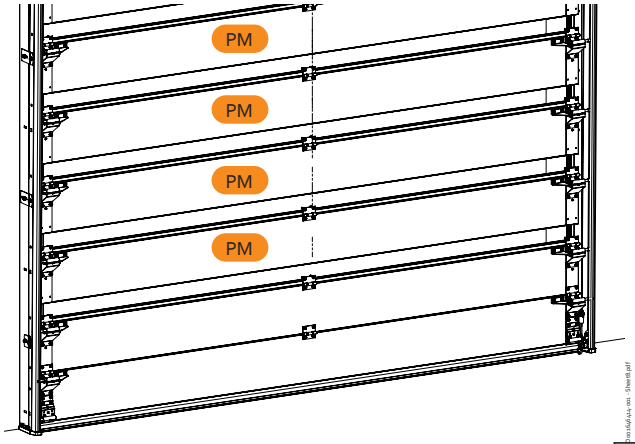

PM
PM
PM
PM

PM(T)

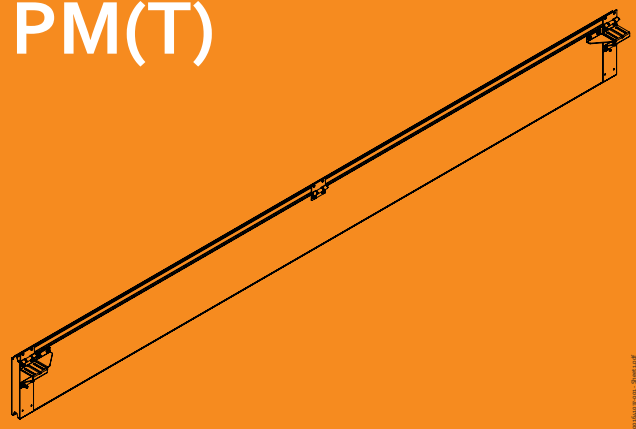


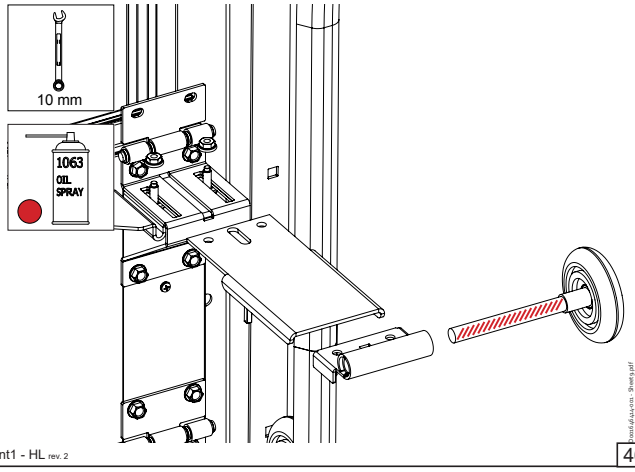

10 mm
1063
OIL
SPRAY

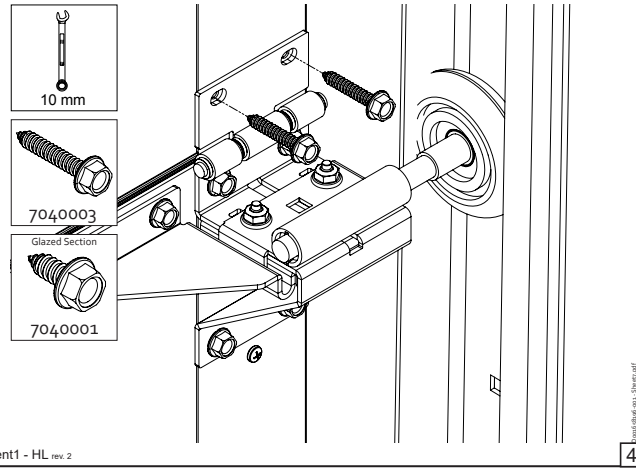

10 mm
7040003
Glazed Section
7040001

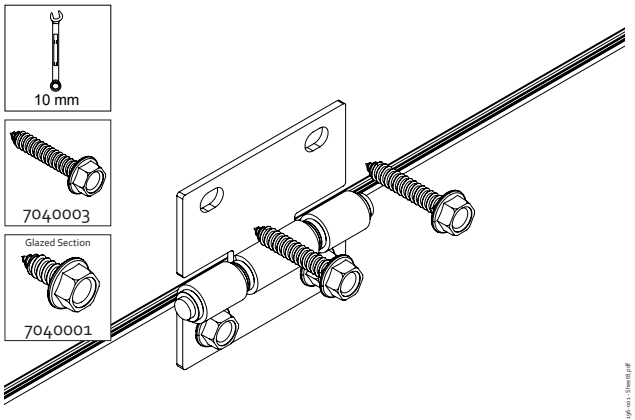

10 mm
7040003
Glazed Section
7040001


PT-HL

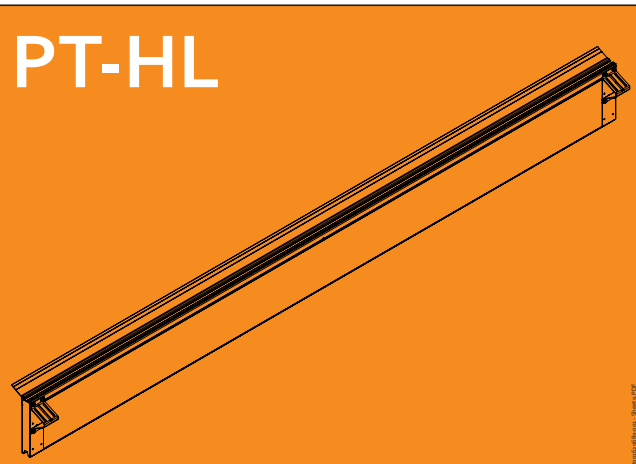


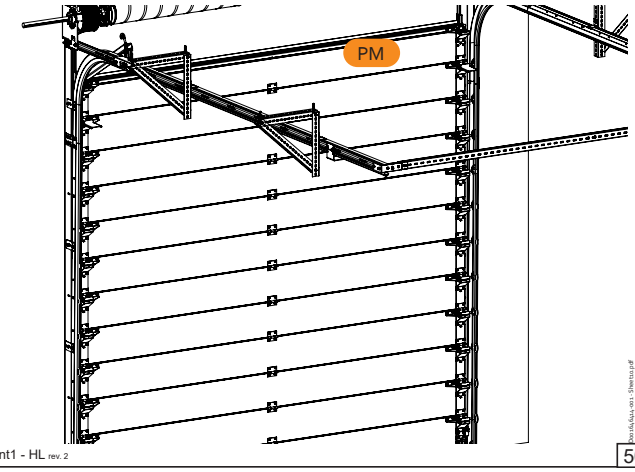

PM

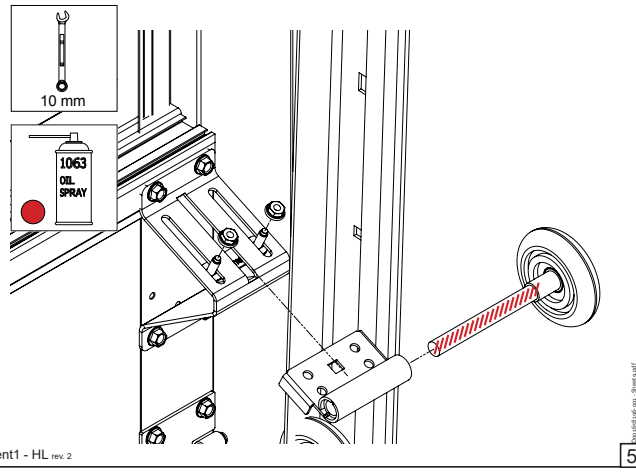

10 mm
1063
OIL
SPRAY

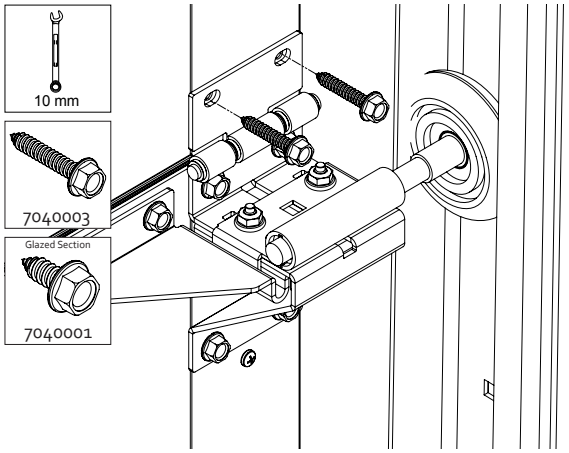

10 mm
7040003
Glazed Section
7040001

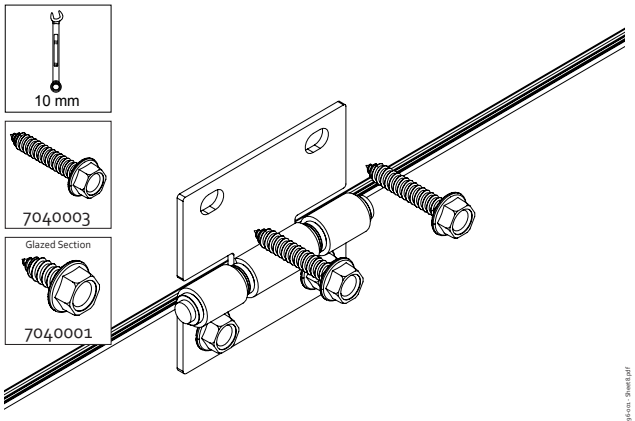

10 mm
7040003
Glazed Section
7040001

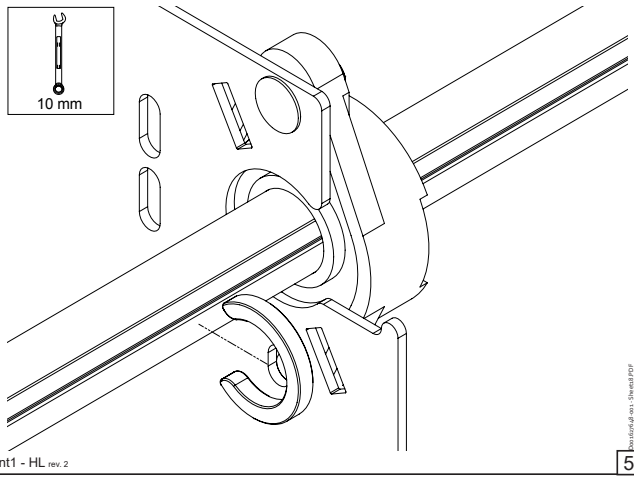

10 mm

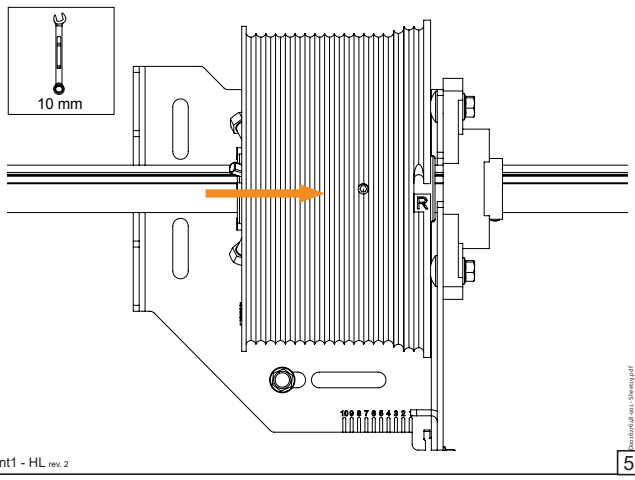

10 mm

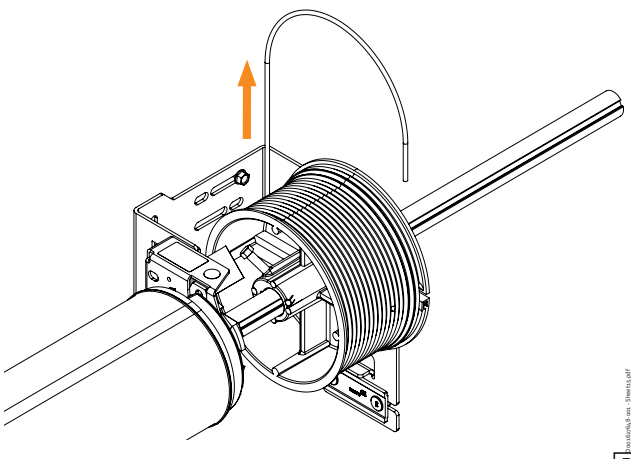


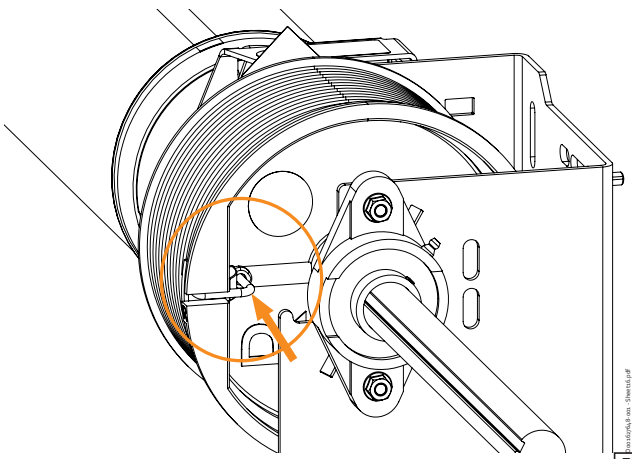


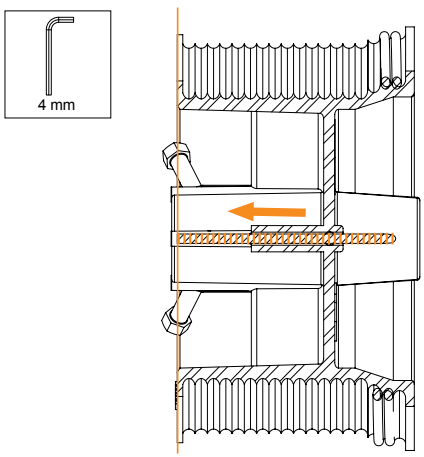

4 mm

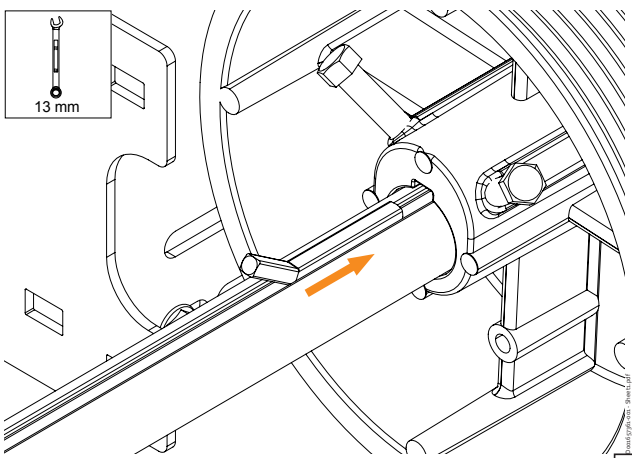

13 mm

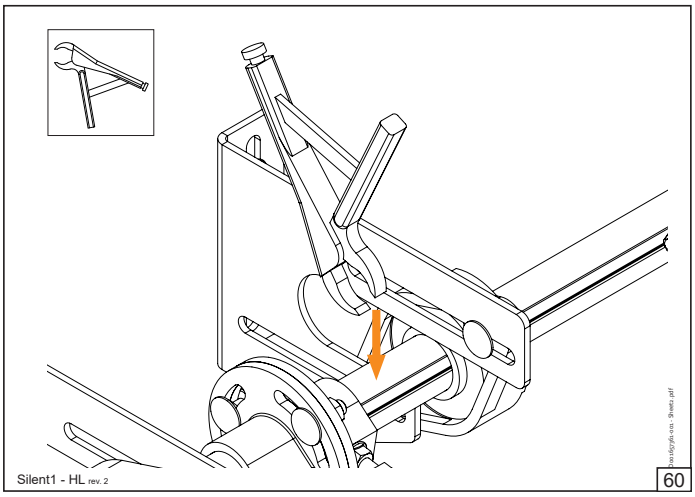


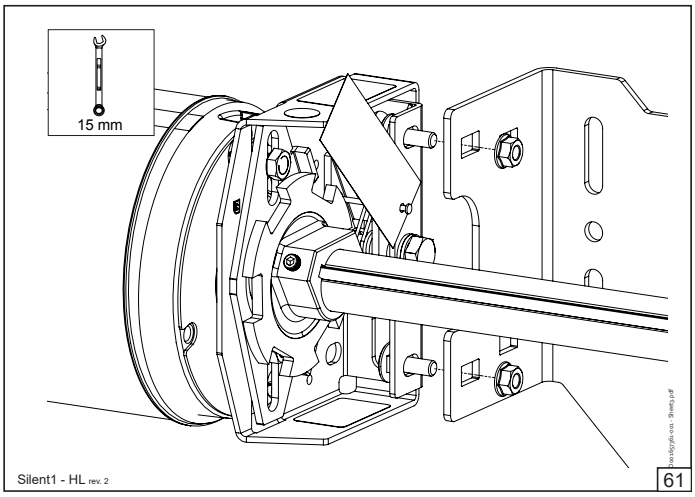

15 mm

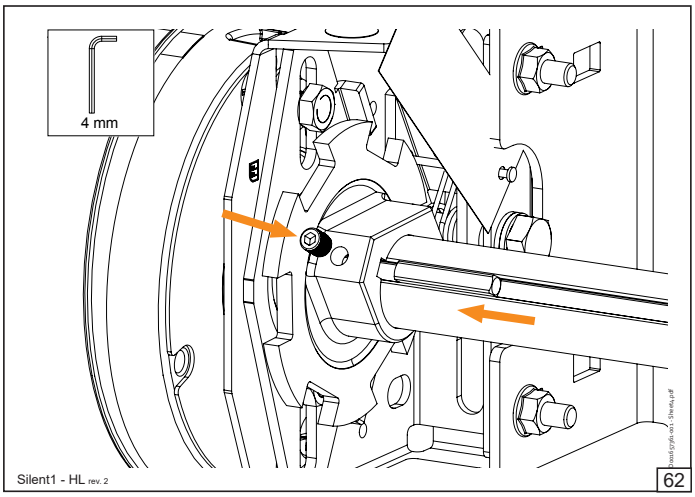

4 mm

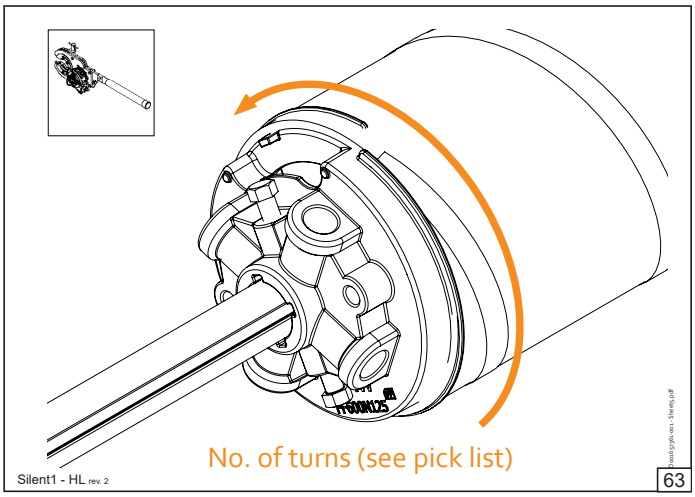

No. of turns (see pick list)

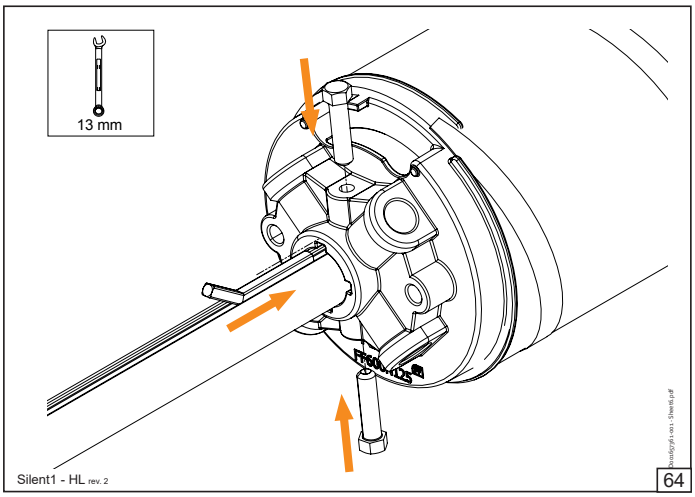

13 mm

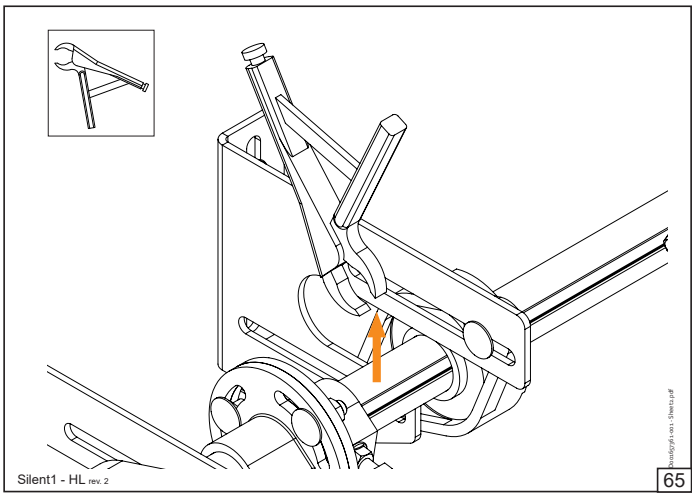


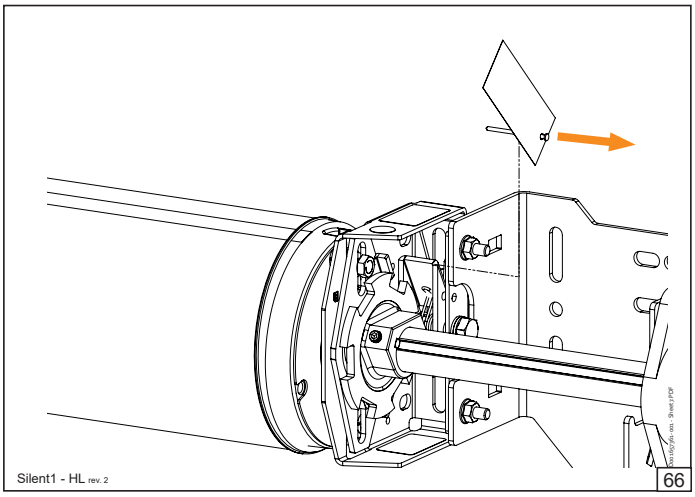

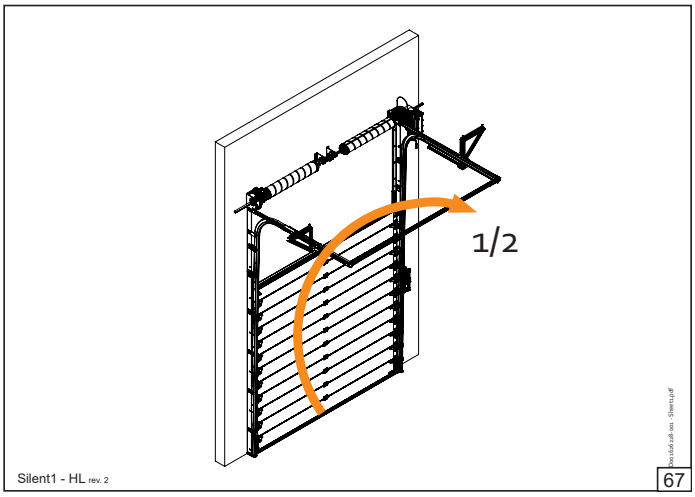

1/2

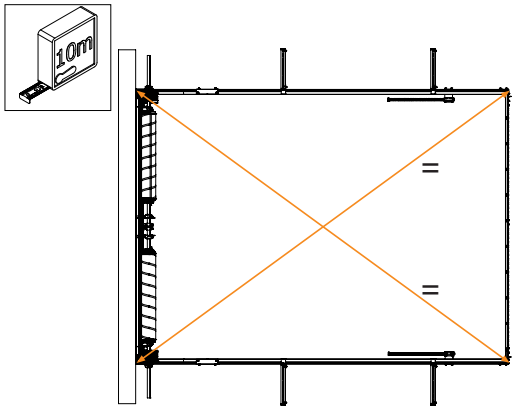


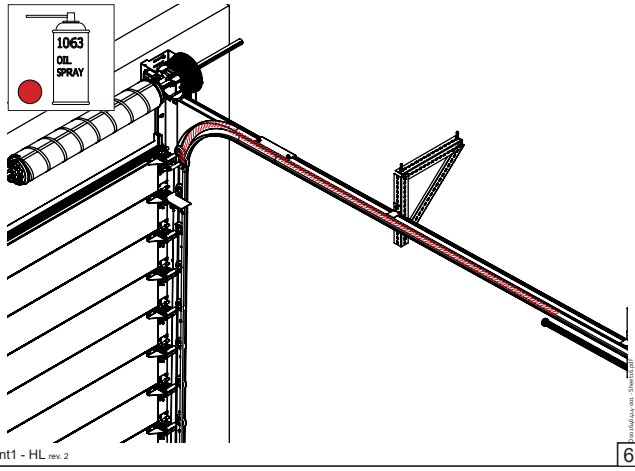


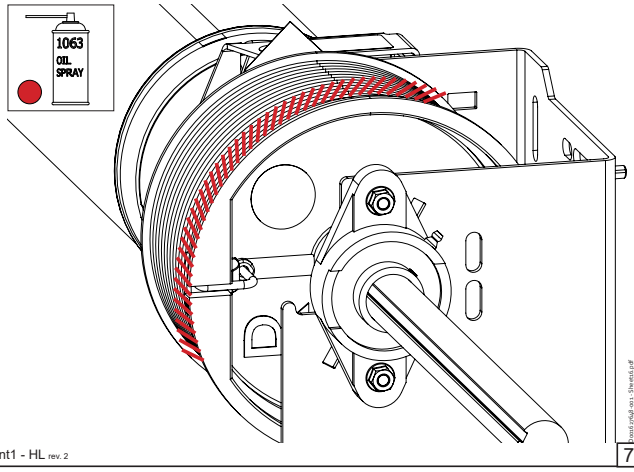



EP
Electronic Parts

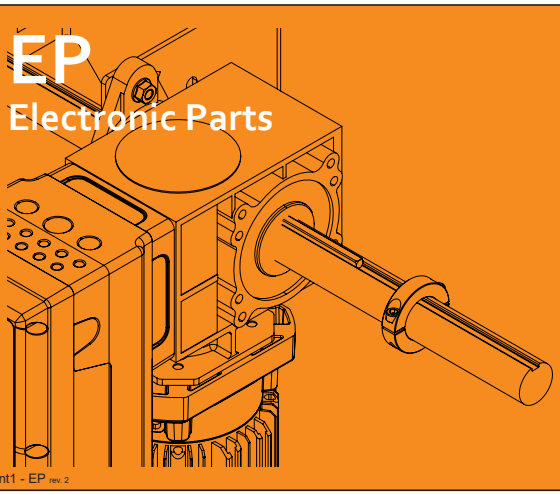


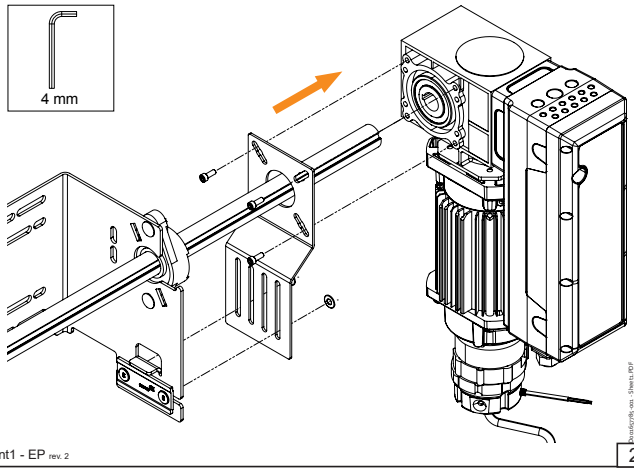


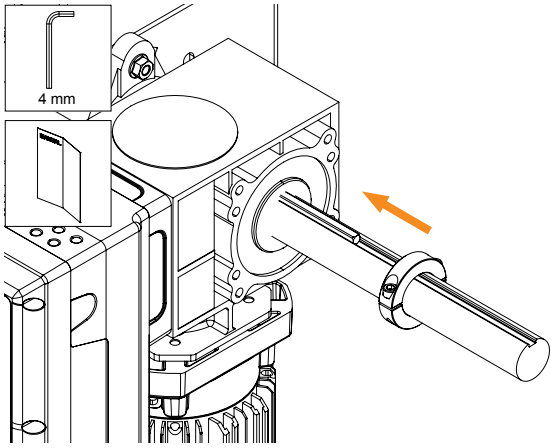


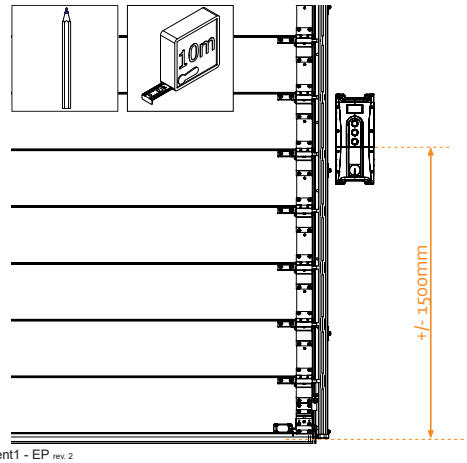


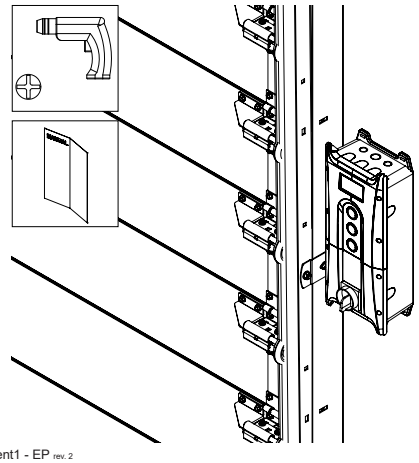


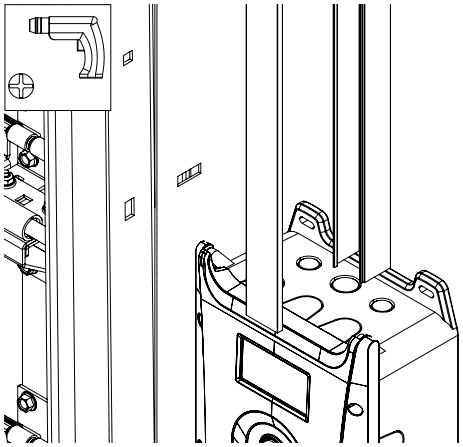


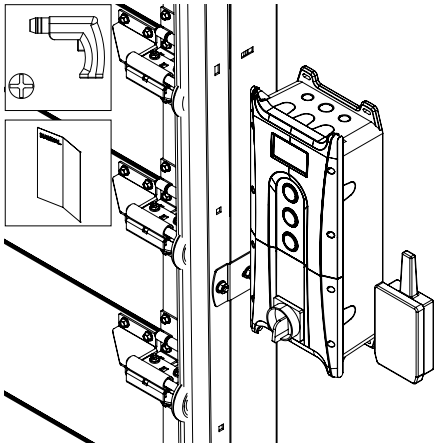


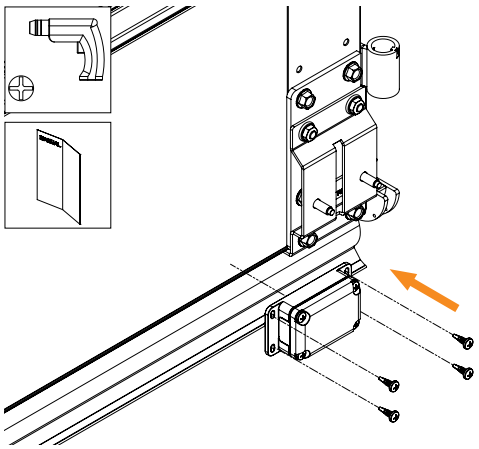


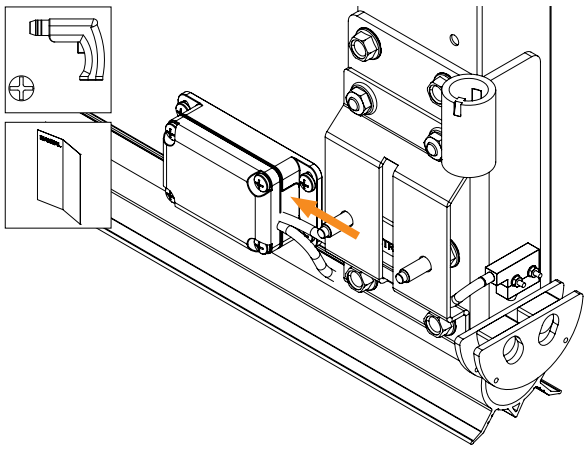

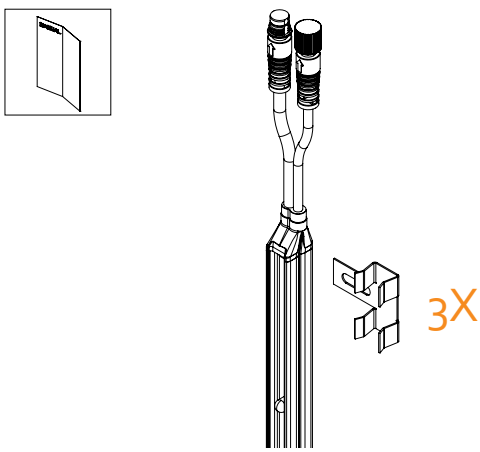
3X

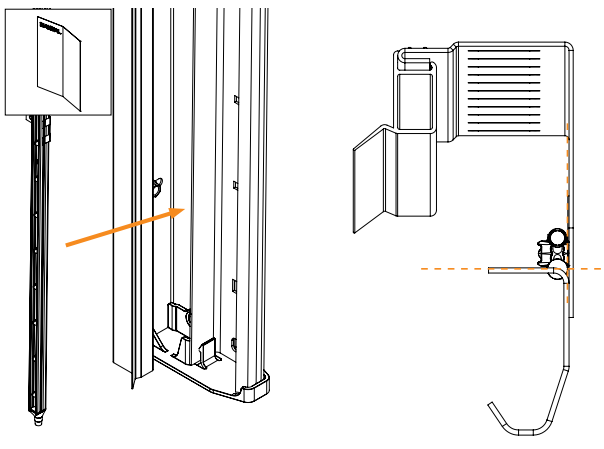

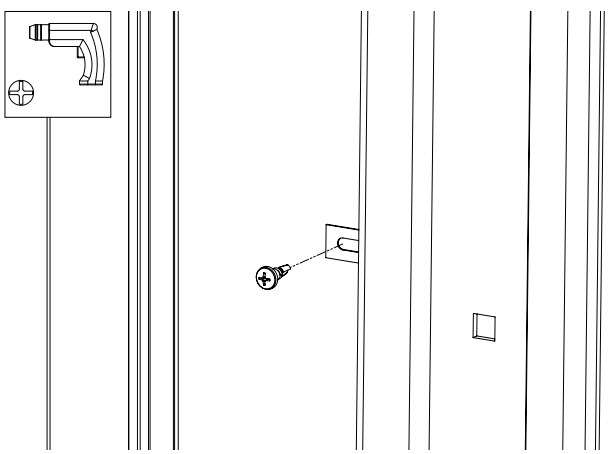

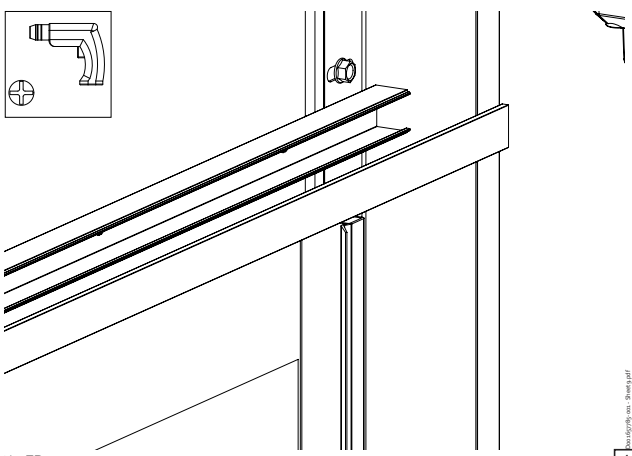



SILENT1

IDD-Parts Deutschland
Hüntestrasse 72
26871 Papenburg/ Aschendorf
Deutschland
T: +49 4962 9969 720
E: info@iddparts.de
www.iddparts.de

IDD-Parts France
ZI du Chesnes - Le Loup
13, Rue du Morellon
38070 St Quentin Fallavier
France
T: + 33 (0) 4 74 82 47 29
E: info@iddparts.fr
www.iddparts.fr

IDD-Parts UK
Unit 2, St Andrews Court
Business Park, Leeds Road
Huddersfield HD1 6QB
United Kingdom
E:info@iddparts.co.uk
T: +44 (0)303 0033623
www.iddparts.co.uk

IDD-Parts BV
Hanzeweg 21
3771 NG Barneveld
The Netherlands
T: +31 (0)342 490 990
E: info@iddparts.nl
www.iddparts.nl